

Sprint PCS®

The clear alternative to cellular.SM

Copyright © 2002 Sprint Spectrum L.P. All rights reserved. No reproduction in whole or in part without prior written approval. Sprint, Sprint PCS, Sprint PCS Wireless Web, Sprint PCS Wireless Web Mail, Sprint PCS Wireless Web Short Mail and the diamond logo are trademarks of Sprint Communications Company L.P. All other trademarks are property of their respective owners.

Welcome to Sprint PCS

Sprint PCS built the largest all-digital, all-PCS nationwide network from the ground up for clearer calls, reaching more than 230 million people. We built our network to give you what we believe you really want from a wireless phone: clear sound, private conversations and time-saving features.

And Sprint Personal Communications Services® can do something even more far-reaching – simplify your life. Our advanced technology is designed to grow with your communications needs so that one day you'll be able to rely entirely on your Sprint PCS® Phone to stay connected.

This guide will introduce you to our technology and your new Sprint PCS Phone through simple, easy-to-follow instructions. Since you're probably anxious to start using your phone, we encourage you to immediately flip to Section One – Getting Started With Sprint PCS Service. This section provides all the information you need to quickly activate your phone, set up your voicemail and much more. It also contains information on how to contact Sprint PCS should you have questions about service, want to purchase additional products or services, or just check your account balance.

Thank you for choosing Sprint PCS.

Table of Contents

1. Getting Started With Sprint PCS Service	11
Turning Your Phone ON and OFF	12
Getting Started With Sprint PCS Service	12
Activating Your Phone	13
Setting Up Your Voicemail	13
Getting Help	14
Understanding This User Guide	16
2. Getting to Know Your Sprint PCS® Phone	17
Highlights and Features	18
Front View of Phone	20
Command Keys	21
Viewing the Display Screen	22
Using the Battery	23
3. Understanding Roaming	27
Understanding How Roaming Works	28
Setting Your Phone's Roam Mode	29
Setting an Alert When Roam Charges Apply (Call Guard)	30
4. Making and Answering Calls	33
Making Calls	34
Answering Calls	34
Adjusting Volume During a Conversation	35
Missed Call Notification	35
Muting a Call	35
Using Sprint PCS Voice Command	36
Dialing Options	37
In-Call Options	38
Incoming Call Notification	38
Changing Ringer Volume	39
End-of-Call Options	39
Saving a Phone Number	39
Finding a Phone Number	41
Four-Digit Dialing	41
Dialing and Saving Phone Numbers With Pauses	42
Calling Emergency Numbers	42

Using One/Two/Three Speed Dialing	43
Displaying Your Phone Number	43
5. Navigating Through Menus and Entering Text	45
Menu Navigation	46
Working Within the Menu Structure	46
Viewing the Menus	47
Selecting a Character Input Mode	51
Entering Characters by Tapping the Keypad	52
Entering Characters Using T9 Text Input	53
Entering Symbols and Numbers	53
6. Adjusting Volume	55
Changing Ringer Volume.	56
Silencing the Ringer.	56
Adjusting Volume During a Conversation	56
Muting a Call	56
7. Using Sprint PCS Service Features	57
Using Caller ID	58
Responding to Call Waiting	58
Three-Way Calling	59
Forwarding Your Calls	59
8. Managing Call History	61
Viewing Call History (Incoming, Outgoing and Missed)	62
Call History Options	62
Making a Call From Call History	63
Prepending a Phone Number From Call History.	63
Saving a Phone Number From Call History.	64
Erasing Call History	64
9. Managing Messaging	65
Setting Up Voicemail	66
Knowing When You Have Messages	66
Message Types.	66
New Voicemail Message Alerts	67
Retrieving Your Voicemail Messages	67
Clearing the Voicemail Message Icon	68
Sending Web Messages	68
New Sprint PCS Wireless Web Messages	68

Sprint PCS Wireless Web Message Storage	69
Displaying Sprint PCS Web Messages	69
Numeric Page Options	69
Extracting Phone Numbers from a Web Message	70
Erasing All Wireless Web Messages	70
Sprint PCS Wireless Web Update Options	70
New Web Alerts	71
Displaying Web Alerts	71
10. Using Your Internal Phone Book	73
Finding Internal Phone Book Entries	74
Internal Phone Book Entry Options	74
Adding a Phone Number to an Internal Phone Book Entry	75
Editing an Internal Phone Book Entry	75
Adding an E-mail Address to an Internal Phone Book Entry	76
Dialing Sprint PCS Services	76
My Sprint PCS Phone Number	77
11. Changing Your Phone's Settings	79
Changing the Greeting	80
Setting the Language of your Phone	80
Adjusting the Ringer Volume	80
Ringer Types	81
Selecting Ringer Types for Voice Calls	81
Sprint PCS Ringers & More SM	81
Selecting Ringer Types for Messages	83
Selecting Ringer Types for Alarms	84
Selecting Ringer Types for Data / Fax In	84
Changing the Backlight Time Length	84
Connect Alert	85
Disconnect Alert	85
Changing the Contrast	86
Receiving Data	87
Returning to Voice Mode	87
12. Setting Your Phone's Security	89
Accessing the Security Menu	90
Locking Your Phone	90
Unlocking Your Phone	90

Changing the Lock Code	91
Calling in Lock Mode	91
Using Special Numbers	91
Erasing Special Numbers	92
Erasing the Internal Phone Book	92
Resetting Your Phone	92
13. Personal Information Management	93
Accessing the Scheduler	94
Calendar	94
Today	94
Month View	94
Jump To Date	95
Task List	95
Countdown	95
Alarm Clock	95
Set Time	96
Adding New Events	96
Alarm Clock	98
14. Using the Voice Services of Your Sprint PCS Phone	99
Using Voice-Activated Dialing	100
Programming the Phone for Voice Dialing	100
Setting Up Voice Dial	101
Placing a Call Using Voice Dial	102
Reviewing Voice Dial Entries	102
Erasing Voice Dial Entries	103
15. Experiencing Sprint PCS Wireless Web®	105
The Sprint PCS Wireless Web	106
The Sprint PCS Wireless Web Browser	106
Launching the Sprint PCS Wireless Web Browser	107
Web Guard	108
Using the Sprint PCS Wireless Web Browser	109
Troubleshooting	111
My Sprint PCS Wireless Web	113
Using Sprint PCS Wireless Web Mail	114
Using AOL Instant Messenger Service	115
Using Sprint PCS Wireless Web Short Mail	116

Signing up for Sprint PCS Wireless Web Updates	118
16. Games	119
Push Push	120
Fly Ribbon	121
Spider Hunter	121
17. Position Location	123
Services	124
Settings	124
18. Calculator	125
Accessing the Calculator	126
Performing a simple Calculations	126
19. Selecting Your Accessories	127
Accessory Options	128
20. Knowing Performance and Safety Guidelines	131
Getting the Most Out of Your Reception.	132
Maintaining Safe Use of and Access to Your Phone.	133
Caring for the Battery	135
Acknowledging Special Precautions and the FCC Notice	136
Owner's Record	137
User Guide Proprietary Notice	137
21. Terms and Conditions & Warranty Information	139
Terms and Conditions of Services	140
Manufacturer's Warranty	153

Getting Started With Sprint PCS Service

In This Section

- ▶ **Activating Your Phone**
 - ▶ **Setting Up Your Voicemail**
 - ▶ **Getting Help**
 - ▶ **Understanding This User Guide**
-

This section walks you through the step-by-step basics of setting up service for your Sprint PCS® Phone, including unlocking and activating your phone, setting up your voicemail and how to contact Sprint PCS for assistance.

Once you have completed this section, you're ready to explore the advanced features of your new phone.

Turning Your Phone ON and OFF

Turning Your Phone ON

To turn your phone on, press  for approximately two seconds.

Once your phone is ON, it displays “Looking for Service” indicating that your phone is searching for a signal. When your phone finds a signal, it automatically enters Standby mode — the phone’s idle state. At this point, you are ready to begin making and receiving calls.

If your phone is unable to find a signal after 15 minutes of searching, a Power Save feature is automatically activated. When a signal is found, your phone automatically returns to standby mode.

In power save mode, your phone searches for a signal periodically without your intervention. You can also initiate a search for Sprint PCS service by pressing any key (when your phone is turned ON).

Tip: The Power Save feature helps to conserve your battery power when you are in an area where there is no signal.

Turning Your Phone OFF

Press  for two seconds.

Your screen remains blank while your phone is off.

Getting Started With Sprint PCS Service

Determine If Your Phone Is Already Activated

If you received your phone in the mail or purchased it at a Sprint® Store, it probably has been activated. All you need to do is unlock your phone.

If your phone is not activated, please refer to your **Start Here Brochure** for easy step-by-step instructions.

Unlocking Your Phone

Follow these steps to unlock your phone:

1. Press and hold  to turn the phone on.
2. Press .
3. Enter your four-digit lock code. For security purposes, the code is not visible as you type.

Tip: If you can't recall your lock code, try using the last four digits of either your Social Security number or Sprint PCS Phone Number, or try 0000. If none of these work, call Sprint PCS Customer Care at 1-888-211-4PCS (4727).

Activating Your Phone

To activate your phone, follow the directions in the **Start Here Brochure** that was included with your phone.

Setting Up Your Voicemail

All unanswered calls to your Sprint PCS Phone are automatically transferred to voicemail, even if your phone is in use or turned off. Therefore, you will want to set up your Sprint PCS voicemail box and personal greeting as soon as your Sprint PCS Phone is activated.

To set up voicemail:

1. Press and hold .
2. Follow the system prompts to create your pass code, record your greeting, record your name announcement and choose whether to activate One-Touch Message Access (a feature that lets you press one key to access messages and bypasses the need for you to enter your pass code).

Note: The voicemail setup process may vary in certain affiliate areas.

Getting Help

Visit Our Web Site

Stop by www.sprintpcs.com to get up-to-date information on Sprint PCS. You can also:

- ▶ Review coverage maps
- ▶ Learn how to use voicemail
- ▶ Access your account information
- ▶ Purchase accessories
- ▶ Add additional options to your service plan
- ▶ Check out frequently asked questions
- ▶ And much more

Sprint PCS Customer Care

Sprint PCS Customer Advocates are available to assist you 24 hours a day, seven days a week. Simply dial 1-888-211-4PCS (4727) from any phone or press    from your activated Sprint PCS Phone while on the Sprint PCS Nationwide Network.

Tip: If you need to reach Sprint PCS Customer Care while you are off the Sprint PCS Network, dial 1-888-211-4PCS (4727).

Once you dial Sprint PCS Customer Care, you can access a number of helpful account services through our automated Customer Care line. By following the voice prompts, you'll be able to learn more about Sprint PCS Products and Services, get Sprint PCS coverage by zip code or request a copy of your invoice.

Tip: If you have a question regarding the operation of your Sprint PCS Phone, dial 1-888-211-4PCS (4727) from another phone so you can use your Sprint PCS Phone while speaking with Customer Care.

Receiving Automated Billing Information

For your convenience, your phone gives you free access to billing information on your Sprint PCS account. This information includes balance due, payment received, billing cycle and the amount of minutes used since your last billing cycle. Follow these steps to access this information:

1. Press   .
2. Follow the voice prompts to receive the information you want.

Note: This service may not be available in all affiliate markets.

Sprint PCS Directory Assistance

Sprint PCS Directory Assistance provides a variety of services, including residential, business and government listings; assistance with local or long-distance calls; movie listings; hotel, restaurant and shopping information and major local event information. There is a per call charge and you will be billed for airtime.

▶ Press    .

Sprint PCS Operator Services

Sprint PCS Operator Services can provide assistance in placing collect calls or calls billed to a local telephone calling card or a third party.

▶ Press  .

Note: Sprint PCS Operator Services may not be available in all affiliate markets.

Understanding This User Guide

This user guide introduces you to our technology and all the advantages of your new Sprint PCS Phone – through easy-to-follow instructions.

- ▶ Sections break down categories of information to progressively take you all the way from learning the basics to using the most advanced phone features.
- ▶ Tips highlight special shortcuts and timely reminders to help you make the most of your new phone.
- ▶ The Index helps you find specific information quickly.

We know that your time is valuable and that's why we've designed this guide to be used in a building block format or in stand-alone sections. You'll get the most out of your phone if you read each section. However, if you'd like to get right to a specific feature, you'll be able to locate the specific section using the colored tabs. Follow the instructions in that section and you'll be ready to use your phone in no time.

Getting to Know Your Sprint PCS® Phone

In This Section

- ▶ **Front View of Phone**
 - ▶ **Viewing the Display Screen**
 - ▶ **Your Phone's Highlights and Features**
 - ▶ **Using the Battery**
-

Your Sprint PCS Phone is packed with features that simplify your life and expand your ability to stay connected to the people and information that are important to you. We know that you're anxious to start using it, so this section will give you a quick introduction to your new phone. The easy-to-follow instructions will guide you through the basics of the most common features of your phone and you'll be on your way to using it in no time.

Don't forget the other chapters in this guide. They're filled with information about the capabilities and benefits of your new Sprint PCS Phone. They include detailed step-by-step instructions that familiarize you with all the features and explain how to customize your phone to meet your specific needs.


Highlights and Features

Congratulations on the purchase of your phone (SPH-A460). This phone is lightweight, easy-to-use, reliable, and offers many significant features:

- ▶ Dual-band capability provides access to other PCS CDMA and analog cellular networks where Sprint PCS has implemented roaming agreements. For further information see "Understanding How Roaming Works" on page 28.
- ▶ Sprint PCS Wireless Web[®] Browser provides access to the wireless Internet in digital mode. For further information see "The Sprint PCS Wireless Web Browser" on page 106.
- ▶ Sprint PCS Wireless Web MailSM, AOL Instant MessengerSM Service and Sprint PCS Wireless Web Short MailSM provide quick and convenient text messaging capabilities. For further information see "Using Sprint PCS Wireless Web Mail" on page 114.
- ▶ Sprint PCS Wireless WebSM Connection offers wireless modem capabilities for your personal computer in digital mode. For further information see "Signing up for Sprint PCS Wireless Web Updates" on page 118.
- ▶ Sprint PCS Voice CommandSM lets you dial phone numbers by speaking someone's name or the digits in their phone number. For further information see "Using Sprint PCS Voice Command" on page 36.
- ▶ Large 4-level gray scale, 6-line blue display.
- ▶ User friendly, menu driven access to features and options.
- ▶ The phone's "flip" cover can be set to answer an incoming call when opened.
- ▶ External LCD
- ▶ The backlit display screen makes it effortless to read the display in low light environments and at night.
- ▶ An Internal Phone Book with 250 number capacity.
- ▶ Speed Dialing, there are four methods of calling numbers previously stored in the Internal Phone Book.
- ▶ A Calendar function allows the scheduling of events, the ability to create "Task Lists", set timers and alarms.
- ▶ Voice activated dialing with 10 locations.

- ▶ T9 predictive text entry for simplicity in entering names and events into both the Internal Phone Book and Calendar.
- ▶ Vibrate mode announces incoming calls and messages without disturbing people around you.
- ▶ MIDI ringers and melodies.
- ▶ A choice of melodies can be used instead of ringer types.
- ▶ One-Touch Internet Access.

Front View of Phone

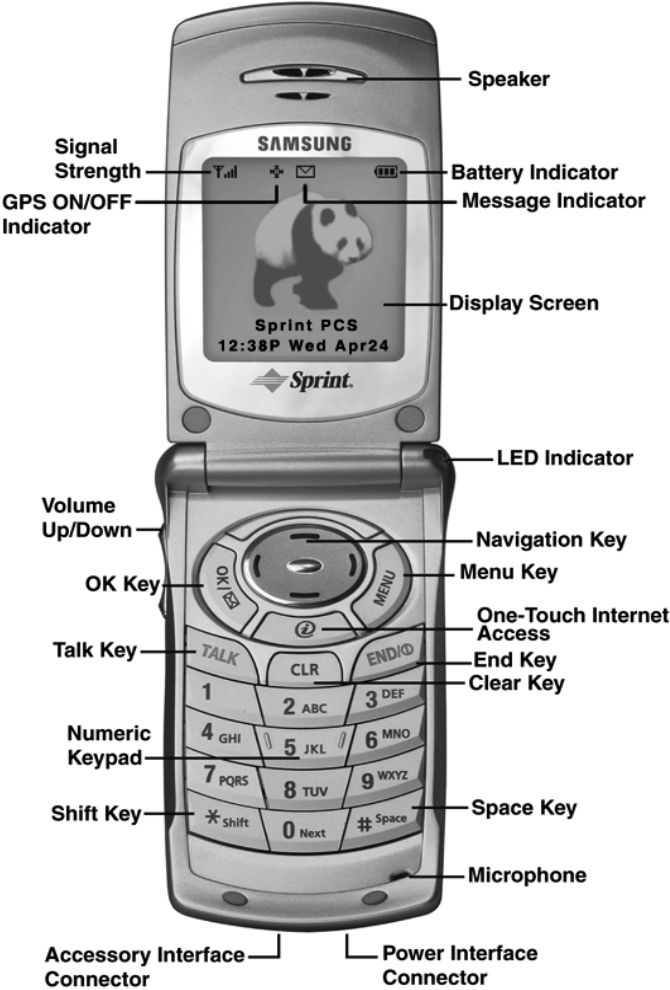

Command Keys



Menu: Displays the first level or Main Menu of options. Highlight and press  again to view the next menu page.



OK: Pressing  when navigating through a menu accepts the highlighted choice in the menu. Pressing  for two seconds automatically dials your voicemail.



Internet Key: This key allows you to have One-Touch Internet access. When this key is pressed, the Sprint PCS Wireless Web browser is launched.



Navigation Key: This key allows you to scroll through the phone menu options, and provides a shortcut to phone functions from Standby Mode.



Volume Key: (On the side of your phone). Adjust the ringer volume in standby mode (with the flip open). Adjust the voice volume during a call. In a menu, scroll up or down to navigate through the menu options. Volume Keys also mute the ringer during an incoming call.



TALK: Place or receive a call. In standby mode, press the key once to enter the Outgoing call log. If you press and hold the key down you will initiate Voice Dial.



CLR (CLEAR): Deletes characters from the display. When in a menu, press to return to the previous menu.



END: Ends a call. Press and hold this key to turn your phone On or Off. While in the main menu, it returns the phone to standby mode and cancels your input.



Numeric Keys: Use these keys to enter numbers, letters, and characters.



Pound: Enters the pound [#] character for calling features. In text entry mode, press to enter a space.



Asterisk: Enters the asterisk [*] character for calling features. In text entry mode, press to change the character input type.



Headset Jack: (on the top of the phone.) Allows you to plug in an optional headset for safe, convenient hands-free conversations.

Viewing the Display Screen

Main LCD:

This list identifies the symbols you'll see on your main LCD screen.

- ▶ shows your current signal strength. The more lines you have, the stronger your signal.
- ▶ shows that the GPS receiver is On or Off.
- ▶ means your phone cannot find a signal.
- ▶ tells you a call is in progress.
- ▶ indicates you are "roaming" off the Sprint PCS Nationwide Network.
- ▶ indicates you are "roaming" off the Sprint PCS Nationwide Network on an analog system.
- ▶ indicates you have voicemail, text, numeric pages, or Sprint PCS Web Alert messages waiting. Press briefly to see a list of pending messages or press and hold to dial voicemail.
- ▶ indicates your phone is in vibrate mode.
- ▶ shows your current battery charge strength. (Icon shown fully charged.)

External LCD:

- ▶ shows your current signal strength. The more lines you have, the stronger your signal.
- ▶ means your phone cannot find a signal.
- ▶ tells you a call is in progress.
- ▶ Time/Date is displayed.
- ▶ shows your current battery charge strength. (Icon shown fully discharged.) Icon is animated while charging.
- ▶ indicates you have voicemail, text, numeric pages, or Sprint PCS Web Alert messages waiting.

Tip: Display indicators let you know when you're off the Sprint PCS Nationwide Network and whether you're operating in digital or analog mode.

Using the Battery

Battery Capacity

Your Sprint PCS Phone is equipped with a Lithium Ion (LiIon) battery. It allows you to recharge your battery before it is fully drained. The battery provides approximately 2.4 hours of continuous digital talk time (1.3 hour in analog) or approximately 168 hours of continuous digital standby time (15 hours in analog). The battery charges in about 4 hours using the travel charger supplied with your phone.

Approximately five minutes before the battery charge level gets too low to operate the phone, the battery sensor will let you know by blinking an empty battery icon () , sounding an audible alert and displaying a warning message. If you continue to operate the phone without charging, the phone will turn off automatically (after a three to five minute delay). If this happens, your call will end.


Note: Long backlight settings, searching for service, vibrate mode and Browser use affect the battery's talk and standby times.

Tip: Be sure to charge your phone's battery and watch your indicator to ensure your levels are okay.

Installing the Battery

Your Sprint PCS Phone comes with a LiIon battery. Follow these steps to install it:

1. Place the battery on to the back of the phone, making sure that the three plastic tabs line up with the corresponding slots on the phone.
2. Gently push the battery down and upward on the phone until it snaps into place.

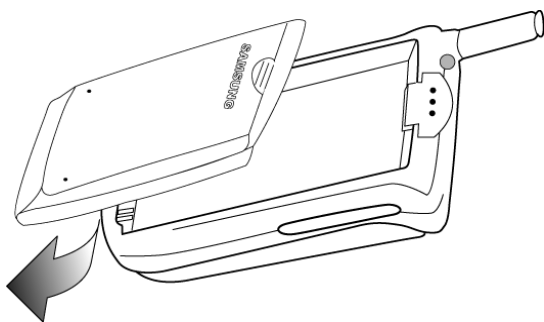

Removing the Battery

To remove your battery for charging or for another reason, follow these easy steps:

1. Make sure the power is off by pressing and holding  so you don't lose any stored numbers or messages.
2. Push down the battery release latch and slide the battery downwards.
3. Lift the battery away from the phone.

Charging the Battery

Your Sprint PCS Phone comes with a rechargeable battery. You should charge the battery as soon as possible so you can begin using your phone. Keeping track of your battery's charge is important. For a quick check of your phone's battery level, glance at the battery charge indicator located in the upper-right corner of your phone's display screen. If the battery charge gets too low, the battery icon () blinks and the phone sounds a warning tone.

Always use a Sprint PCS-approved Travel Charger or Vehicle Power Adapter to charge your battery.

Warning! Using the wrong battery charger could cause damage to your phone and void the warranty.

Using the Travel Adapter

To use the travel charger provided with your phone:

1. Plug the travel charger power cord into a wall outlet.
2. Plug the other end of the travel charger into the bottom of the phone, with the battery installed.

The LED on the phone indicates the following:

- ▶ A red light with battery animation indicates the battery is charging.
- ▶ A green light without animation indicates the battery is fully charged.
- ▶ A yellow light indicates that the battery is operating at a temperature that is too high or too low, or that there is a poor connection. Make sure the phone is resting in the charger slot.

It generally takes about four hours to fully recharge a completely discharged battery. With the Sprint PCS-approved LiIon battery, it is practical to recharge the battery before it becomes completely discharged.

To get the quickest charge for any battery:

- ▶ Turn the phone off.

Accessory Interface Connector

The accessory interface connector at the bottom of the phone allows you to connect the Travel Charger or Vehicle Power Adapter to the phone. It also allows you to connect the optional USB Data cable to the phone. For more information, see "Accessory Options" on page 128.

Understanding Roaming

In This Section

- ▶ **Understanding How Roaming Works**
 - ▶ **Understanding the Difference Between Roaming and Sprint PCS Network Calls**
 - ▶ **Setting Your Phone's Roam Mode**
 - ▶ **Setting and Using Call Guard**
-

Roaming is the ability to make or receive calls while you're off the Sprint PCS Nationwide Network. Your new dual-band Sprint PCS® Phone works anywhere on the Sprint PCS Nationwide Network and allows you to roam on analog and digital networks virtually anywhere in the U.S. where compatible wireless service is available.

This section explains how roaming works as well as special features that let you manage your roaming experience.

Understanding How Roaming Works

Recognizing Icons on the Display Screen

Your phone's display screen always lets you know when you're off the Sprint PCS Network and whether your phone is operating in analog or digital mode. The following chart indicates what you'll see depending on where you're using your phone.

	Roaming Indicator	Analog Indicator
Sprint PCS Nationwide Network		
Other Digital Networks		
Analog Networks		

Tip: Remember, when you're using your phone off the Sprint PCS Network, always dial numbers using 11 digits (1 + area code + number.)

Note: You will pay a higher per-minute rate for roaming calls.

Roaming on Other Digital Networks

When you're roaming on other digital networks, your call quality and security will be similar to the quality you receive when making calls while on the Sprint PCS Network. You may not be able to access certain calling features, such as Sprint PCS Wireless Web.

Roaming on Analog Networks

When you roam on analog networks, you will experience a similar quality provided by other analog carriers today. Although some calling features, such as Sprint PCS Wireless Web, may be unavailable, you can still make and receive calls. You will experience a few differences including:

- ▶ You are more likely to experience static, cross-talk, fade-out and dropped calls.

- ▶ Some calling features which are standard on the Sprint PCS Network, such as Call Waiting, Sprint PCS Wireless Web and direct international dialing, are unavailable.
- ▶ There are security and privacy risks (eavesdropping and cloning) that exist with conventional analog services today.
- ▶ Your battery needs recharging sooner when you use your phone for analog roaming.

Tip: If you're on a call when you leave the Sprint PCS Network and enter an area where roaming is available (whether digital or analog), your call is dropped. If your call is dropped in an area where you think Sprint PCS Service is available, turn your phone off and on again to reconnect to the Sprint PCS Nationwide Network.

Setting Your Phone's Roam Mode

Your Sprint PCS Phone allows you to control your ability to roam. By using the **Roaming** menu option, you determine which signals your phone accepts.

Set Mode

Choose from three different settings on your dual-band mode phone to control your roaming experience:

1. Press  for **Main Menu**
 2. Press  for **Roaming**.
 3. Press  for **Set Mode**. To select an option, scroll to select **Automatic**, **Sprint PCS**, or **Analog**.
 4. Press  to **Save**.
- ▶ **Automatic:** This setting seeks Sprint PCS Service. When Sprint PCS Service is unavailable, it searches for an alternative system.
 - ▶ **Sprint PCS:** This setting allows you to select the Sprint PCS Nationwide Network only and prevents roaming on other networks.
 - ▶ **Analog:** This setting forces the phone to seek an analog roaming system. The previous setting is restored the next time the phone is turned on.

Setting an Alert When Roam Charges Apply (Call Guard)

In addition to the roaming icon, Call Guard alerts you when roaming charges apply. This feature makes it easy to manage your roaming charges by reminding you when you make or receive roaming calls. It also requires you to take additional steps before placing or answering a roaming call. These additional steps are not required when you make or receive calls while on the Sprint PCS Nationwide Network.

To Turn the Call Guard Feature On or Off:

1. Press  for the **Main Menu**.
 2. Press  for **Roaming**.
 3. Press  for **Call Guard**. Wait briefly until a message prompt displays and then disappears from the display screen.
 4. Select **Yes** or **No**, and press .
- ▶ If the **Yes** option is chosen, an extra step is required to make or take roaming calls.
 - ▶ If the **No** option is chosen, no extra step is required to make or take roaming calls.

To Place Roaming Calls With Call Guard On:

1. From the main menu, dial the ten-digit number. (You can also initiate a call from the Internal Phone Book, Call History or (Sprint PCS Web Messages) and press .
2. A message is displayed indicating that roaming rate applies. Press  to place the call.

To Answer Incoming Roaming Calls With Call Guard On:

Remember if the Call Guard feature is set to **On**, you need to take extra steps to make and receive roaming calls even if you have selected the **Analog** setting.

Setting the Time and Date in Analog mode

The time and date are set automatically by the Sprint PCS Network. If you are outside your coverage area and are in analog mode, the time and date are not automatically updated. To set the time and date in analog mode:

1. Press  for the **Main Menu**.
2. Press  for **Calendar**.
3. Press  for **Set Time**.
4. Enter the correct time and date and press .

Making and Answering Calls

In This Section

- ▶ **Making Calls**
 - ▶ **Answering Calls**
 - ▶ **Using Sprint PCS Voice Command**
 - ▶ **Dialing Options**
 - ▶ **In-Call and End-of-Call Options**
 - ▶ **Using One-Touch/Two-Touch Speed Dialing**
 - ▶ **Calling Emergency Numbers**
-

Your Sprint PCS® Phone gives you different options for placing calls, so you can use the method that works best for you. Once you learn the basics here, the possibilities are endless.

Making Calls

Your Sprint PCS® Phone offers many different ways to make calls, including Sprint PCS Voice CommandSM ("Using Sprint PCS Voice Command" on page 36), Speed Dialing ("Using One/Two/Three Speed Dialing" on page 43) and using Call History ("Viewing Call History (Incoming, Outgoing and Missed)" on page 62).

To make a call using your keypad:

1. Make sure your phone is on.
2. Enter a phone number. (If you make a mistake while dialing, press  to erase one digit at a time. Press and hold  to erase the entire number.)
3. Press . (To make calls when you are roaming, and Call Guard is enabled, press  to acknowledge Roaming rates. For further information see "To Place Roaming Calls With Call Guard On:" on page 30)
4. When you're finished, press  or close the flip to complete the call.

Tip: To redial your last outgoing call, press  to view the phone number. Press  again to dial.

Tip: When making calls off the Sprint PCS Network, always dial using 11 digits (1 + area code + phone number).

Answering Calls

1. Make sure your phone is on. If your phone is off, incoming calls go to voicemail.
2. When your phone rings, press . (To answer incoming calls when you are roaming and Call Guard is enabled press . For further information see "To Answer Incoming Roaming Calls With Call Guard On:" on page 30)
3. To disconnect the call, press  briefly.

Adjusting Volume During a Conversation

Whether you need to hear more or less of a conversation, adjust the volume keys on the side of your phone during a call.

To preset the voice volume when the phone is in standby mode:

1. Press .
2. Press  for **Sounds**.
3. Press  for **Voice Volume**.
4. Select the desired level using the volume keys and press  to save and exit.

Missed Call Notification

When an incoming call is not answered, the number of missed calls together with the last call's phone number is displayed on your screen.

To display the Missed Call log and view the last 10 missed calls:

1. Press .
2. Press  for **Call History**.
3. Press  for **Missed**.

Note: To view the details of the missed call, highlight the entry and press .

To dial a missed call entry's phone number:

- ▶ Highlight the entry. Press .

Muting a Call

There are times when it's necessary to mute a call so that your caller does not hear you or certain background noise.

To use this function during a call:

1. Press .
 2. Press  to **Mute**.
- ▶ When the phone is muted, "**Mute**" appears on the display.

To unmute a call:

1. Press .
2. Press  to **UnMute**.

Using Sprint PCS Voice Command

With Sprint PCS, the first wireless provider to offer innovative Voice Command technology, reaching your friends, family, co-workers and teammates has never been easier – especially when you’re on the go.

With Sprint PCS Voice Command:

- ▶ You can store all your contact’s phone numbers, so you can simply say the name of the person you want to call.
- ▶ There’s no need to punch in a lot of numbers, memorize voicemail passwords or try to dial while you’re driving.
- ▶ You can call anyone in your Voice Command address book – even if you don’t remember their phone number.

It’s Easy To Start

Just dial    from your Sprint PCS® Phone to activate the service. You can also dial   to go through a Sprint PCS Voice Command tutorial directly from your phone.

Create Your Own Address Book

You can program up to 250 names into your address book and with the advanced technology of Sprint PCS Voice Command – you can have instant access to all of them.

There are four ways to update your address book:

- ▶ **On the Web:** Go to www.talk.sprintpcs.com and receive a fully functional Web-based address book to create and update your contacts.
- ▶ **Use an Existing Address Book:** Upload your contacts from Microsoft® Outlook®, Microsoft Excel and other personal information software into your address book for no additional charge.
- ▶ **Call Directory Assistance:** If you don’t have a computer or Internet access handy, you can have Sprint PCS Directory Assistance look up phone numbers for you and automatically add them to your address book. Just say, “Call operator,” and we’ll add two names and

numbers to your address book for our standard directory assistance charge.

- ▶ **Use Voice Recordings:** Simply dial    and say, "Add name." You will then be asked to say the name and number you want to add to your personal address book. Your address book can store up to 20 Voice Recordings at once.

How It Works

1. Once you've signed up for Sprint PCS Voice Command and created your address book, all you do is press   . You'll hear a tone followed by the prompt "Ready."
2. After the "Ready" prompt, simply say, in a natural voice, the name of the person or the number you'd like to call. For example, you can say, "Call Jane at work," "Call John on his wireless phone," "Call 555-1234" or "Look up Bob."
3. The number will automatically be dialed. Keep in mind that Sprint PCS Voice Command recognizes not only your voice, but any voice, so others can experience the same convenience if they use your phone.

For more helpful hints on Sprint PCS Voice Command, visit www.talk.sprintpcs.com.

Dialing Options

Dialing options are displayed when you enter numbers using the keypad.

To select an option press  and the number on the keypad that corresponds with the desired choice.

- ▶ **(1) Talk** is used to dial the phone number. (If you are roaming and have the Call Guard feature activated, you must then press . See "To Place Roaming Calls With Call Guard On:" on page 30.)
- ▶ **(2) Save** to save the phone number in your Internal Phone Book. (See "Finding Internal Phone Book Entries" on page 74.)
- ▶ **(3) Find** is used to locate and display Internal Phone Book entries that contain the numbers entered. (See "Finding Internal Phone Book Entries" on page 74.)
- ▶ **(4) Hard Pause** is used to insert a hard pause. (See "Dialing and Saving Phone Numbers With Pauses" on page 42.)

- ▶ **(5) 2 Second Pause** to insert a 2-second pause. (See "Dialing and Saving Phone Numbers With Pauses" on page 42.)

Tip: To speed dial a phone number from standby mode, press and hold the Internal Phone Book entry number. If the entry number is two digits, enter the first digit, then press and hold the second digit.

In-Call Options

During a call, your phone displays menu options in addition to the main menu.

To select an option, highlight it and press .

- ▶ **(1) Mute or UnMute** Select **Mute** to mute your phone's microphone. Select **Unmute** to reactivate the microphone.
- ▶ **(2) Call History** checks your call log for outgoing, incoming, and missed calls. You can also erase the logs from this menu.
- ▶ **(3) PhoneBook** accesses the Phone Book menu options.
- ▶ **(4) 3-Way Call** allows you to talk to two different people at the same time. (For more information, see "Three-Way Calling" on page 59.)
- ▶ **(5) Messages** allows you to check for voicemail, page, and text messages.
- ▶ **(6) Calendar** accesses the Calendar menu options which allows you to schedule different events.
- ▶ **(7) Version** displays the hardware and software version being used.

Incoming Call Notification

Depending on your settings, your Sprint PCS Phone notifies you of incoming calls in the following ways:

- ▶ The phone rings and/or vibrates.
- ▶ The LED flashes.
- ▶ The backlight illuminates on the main LCD screen when the flip is open. The backlight illuminates the external LCD when the flip is closed.
- ▶ The main/external screen displays an incoming call message.
- ▶ If the phone number is available, the phone number of the caller is displayed.

- ▶ If the phone number is in your Internal Phone Book, the Phone Book entry's name is displayed.

The following option is also displayed.

- ▶ End: Silent to mute the ringer.

Note: You can also mute the ringer by pressing the up or down volume key.

Changing Ringer Volume

To change the ringer volume, adjust the volume keys on the side of your phone when the phone is in Standby mode and the flip is open.

Note: To change the ringer volume from the main menu, see "Changing Ringer Volume" on page 56.

End-of-Call Options

After receiving a call from or making a call to a phone number that is not in your Internal Phone Book, the phone number, the duration of the call and the following menu options are displayed for 10 seconds. During this time you can press  to add this number to your internal phone book.

Note: The End-of-Call options are not displayed for calls identified as No ID or Restricted.

Saving a Phone Number

Your Sprint PCS Phone can store up to 250 Internal Phone Book numbers. Phone Book entries can store up to a total of six phone numbers and the entry's name can contain 12 characters. There are seven different labels that are available, they are Home, Work, Mobile, Pager, Fax, No Label, or E-mail. Any of these labels can be selected to be use as the Speed Dial number. Speed dial can only be assigned to one number in each phone book entry.

To save a number from the main menu:

1. Enter a phone number.
2. Press .

3. Press  for **Save**.
4. Press  for **New Entry?**.
5. Select the desired label by scrolling through the **Home, Work, Mobile, Pager, Fax, or No Label**. Press .
6. Enter the name of the entry using the keypad. Press  and select the desired entry mode. For more information on the different entry modes, see "Selecting a Character Input Mode" on page 51.
7. Press  to exit the **Enter Name** screen.
8. Press the Navigation key down and highlight the **Entry** field.
9. Press the Navigation key to the left or right to display the desired entry, or leave the value defaulted to the first available.
10. Press the Navigation key down to highlight the **Speed Dial** field.

Note: The label selected in step 5 will already have the number being entered.

11. Press the Navigation key left or right to scroll through all labels assigned to this entry. Choose the one you wish to be the primary number for this phone book entry.
12. Press the Navigation key down to highlight the **Secret** field.
13. Press the Navigation key left or right to scroll between On or Off.
14. Press the Navigation key down to highlight the **Home, Work, Mobile, Pager, Fax, No Label** and **E-mail** fields.
15. Press the Navigation key down and highlight the **Group** field.
16. Press the Navigation key left or right to scroll between **No Group, Friend, Family, Colleague, and VIP**.
17. Press the Navigation key down and highlight the **Name Ringer** field.
18. Press the Navigation key left or right to scroll through the different ringers.
19. Press  to save the entry in the internal phone book.

Note: A phone number labeled Fax or Data can only be dialed through a personal computer.

Finding a Phone Number

You can search for Internal Phone Book entries with phone numbers that contain a specific string of numbers.

To find a phone number:

1. Enter one or more digits. The more numbers you enter, the more specific the search becomes.
2. Press  to display the main menu options.
3. Press  for **Find**. The phone prompts you to “Wait” and tells you how many numbers match the number of digits you just entered into the phone.
4. Press the navigation key  up or down to scroll through the list of available matches.
5. When the desired number is displayed, press .

Four-Digit Dialing

Your phone has the ability to find and dial 4-digits of any phone number stored in the address book.

To call someone stored in your phone book by entering four digits of their phone number:

1. From the standby mode, enter four digits of any phone number stored in the phone book.
2. Press .

Note: If more than one number is found with the same last four digits, use the navigation key to scroll up or down to the desired entry. When the desired number is displayed, press .

Or:

To dial four digits without the 4-digit dial feature interfering:

1. From the standby mode, enter four digits.
2. Press   for **4-Digit Dial**.

Dialing and Saving Phone Numbers With Pauses

You can dial or save phone numbers with pauses for use with automated systems, such as voicemail or credit card billing numbers. If you select a hard pause, the next set of numbers are sent when you press . If you select a 2-second pause, your phone automatically sends the next set of numbers after two seconds.

Note: You can have multiple pauses in a phone number and combine 2-second and hard pauses.

To dial or save a phone number with pauses:

1. When in standby mode, enter the first digits of the phone number that comes before the required pause.
2. Press  to open the Menu options.
3. Press  for Hard Pause or  for a 2sec Pause. (Hard Pauses are displayed as a “P” and 2sec Pauses as a “T”.)
4. Enter the additional numbers.

Note: Complete step three and four again, if necessary.

5. Press  to dial.

When dialing a number with a hard pause, highlight **Talk:DTMF** and press  to send the next set of numbers.

Calling Emergency Numbers

You can place calls to 911 (dial    and press ), even if your phone is locked or your account is restricted.

Using One/Two/Three Speed Dialing

With this feature, you can automatically call Speed Dial entries using one key press for locations 1-9, two key presses for locations 10-99, or three key presses for locations 100-250.

To use **One-Touch Dialing** for Speed Dial locations 1-9:

- ▶ Press and hold the appropriate key for two seconds. The display confirms that the number has been dialed when it shows “Connecting.”

To use **Two-Touch Dialing** for Speed Dial locations 10-99:

1. Press the first digit.
2. Press and hold the second digit for two seconds. The display confirms that the number has been dialed when it shows “Connecting.”

To use **Three-Touch Dialing** for Speed Dial locations 100-250:

1. Press the first digit.
2. Press the second digit.
3. Press and hold the third digit for two seconds. The display confirms that the number has been dialed when it shows “Connecting”.

Displaying Your Phone Number

Just in case you forget your phone number, your Sprint PCS Phone can remind you.

To display your phone number:

1. From standby mode, press  for **Main Menu**.
2. Press  for **Phonebook**.
3. Press  for **My Phone #**. Your phone number is displayed on the screen.

Navigating Through Menus and Entering Text

In This Section

- ▶ **Menu Navigation**
 - ▶ **Viewing the Menus**
 - ▶ **Entering Characters by Tapping the Keypad**
 - ▶ **Entering Characters Using T9 Text Input**
 - ▶ **Entering Symbols and Numbers**
-

This section is a road map to using your phone and also shows how to enter characters in your phone. Every function and feature can be accessed through a menu. Take a few moments to know your way around and how to enter text. You'll find that it makes your phone easier to use.

Menu Navigation

Your Sprint PCS Phone allows you to scroll through menus quickly and easily. The scroll bar at the right of the menu keeps track of your position in the menu at all times.

Working Within the Menu Structure

Selecting Menu Items

As you navigate through a menu, the options are highlighted. Select an option by highlighting it and pressing .

For example, if you want to view your last incoming call:

1. From the main menu, highlight **Call History** and press .
 2. Press the navigation key down to highlight **Incoming** and press .
- If you have received any calls, they are displayed on the screen.

Backing Up Within a Menu

To go to the previous menu:

- ▶ Press .

To return to standby mode:

- ▶ Press .

Viewing the Menus

Menu Diagram

Menus let you check or change your phone settings. The following outline shows your phone's menu structure.

1. Call History
 - 1: Outgoing
 - 2: Incoming
 - 3: Missed
 - 4: Erase History
 - 1: Outgoing
 - 2: Incoming
 - 3: Missed
 - 4: All Calls
 - 5: Air Time
 - 1: Last Call
 - 2: Total Airtime
2. Wireless Web
 - 1: Downloads
 - 2: Messages
 - 3: Web Alerts
 - 4: Start Browser
 - 5: Connection
 - 1: Data/Fax Off Voice Only
 - 2: Incoming Fax Only
 - 3: Incoming Data Only
 - 6: Web Guard
 - 1: None
 - 2: To Start
 - 3: To End
 - 4: Both
 - 7: Erase Msgs
 - 1: Page/Text
 - 2: Web Alerts
3. Phone Book
 - 1: Find Name
 - 2: Add New Entry
 - 3: My Phone #
 - 4: Find Entry
 - 5: Group Search
 - 1: In No Group
 - 2: In VIPs
 - 3: In Colleague
 - 4: In Family
 - 5: In Friends

- 6: Add email
- 7: Services
 - 1: Account Info
 - 2: Customer Care
 - 3: Dir Assist
 - 4: Prepaid SVC
- 4. Roaming
 - 1: Set Mode
 - 1: Automatic
 - 2: Sprint PCS
 - 3: Analog
 - 2: Call Guard
 - 1: No
 - 2: Yes
- 5. Calendar
 - 1: Today
 - 2: Month View
 - 3: Jump to Date
 - 4: Task List
 - 5: Countdown
 - 6: Alarm Clock
 - 1: Alarm # 1
 - 2: Alarm # 2
 - 3: Alarm # 3
 - 7: Set Time
- 6. Voicemail
 - 1: Listen
 - 2: Reset
- 7. Voice Dial
 - 1: Record
 - 2: Review
 - 3: Erase All
 - 4: Set Active
 - 1: Talk Only
 - 2: Talk/Flip
- 8. Sounds
 - 1: Ringer Volume
 - 1: Calls
 - 1: Off
 - 2: Vibrate
 - 3: 1-Beep
 - 4: Level 1-8
 - 5: Ring+Vib
 - 2: Messages
 - 1: Off
 - 2: Vibrate

- 3: 1-Beep
 - 4: Level 1-8
 - 3: Alarms
 - 1: Off
 - 2: Level 1-8
- 2: Ringer Type
 - 1: Voice Calls
 - 1: with Caller ID
 - 2: No Caller ID
 - 2: Messages
 - 1: Voicemail
 - 2: Page
 - 3: Text
 - 4: Web Alerts
 - 3: Alarms
 - 4: Data/Fax In
 - 5: Schedule
- 3: Key Beep
 - 1: Off
 - 2: Level 1-8
- 4: Tone Length
 - 1: Long
 - 2: Short
- 5: Alerts
 - 1: Minute Beep
 - 1: Off
 - 2: On
 - 2: Service
 - 1: Off
 - 2: On
 - 3: Connect
 - 1: On
 - 2: Off
 - 4: Disconnect
 - 1: On
 - 2: Off
- 6: Voice Volume
 - 1: Level 1-8
- 7: Roam Ringer
 - 1: Normal
 - 2: Distinctive
- 9. Setup/Tool
 - 1: Display
 - 1: Idle Screen
 - 1: Panda
 - 2: Dog
 - 3: Race Cars

- 4: Night
 - 2: Backlight
 - 1: Flip Open
 - 2: 30 Seconds
 - 3: 8 seconds
 - 4: Off
 - 3: Greeting
 - 4: Contrast
 - 1: Lowest
 - 2: Low
 - 3: MED
 - 4: High
 - 5: Highest
 - 5: Version
- 2: Security
 - 1: Lock Phone
 - 1: Unlocked
 - 2: On Power Up
 - 3: Lock Now
 - 2: Change Lock
 - 3: Special #
 - 1: Empty
 - 2: Empty
 - 3: Empty
 - 4: Erase PBook
 - 5: Reset Phone
- 3: Call Answer
 - 1: Any Key
 - 2: Flip Open
 - 3: TALK Key
- 4: Auto Answer (Car Kit/Headset)
 - 1: No
 - 2: Yes
- 5: Language
 - 1: English
 - 2: Spanish
- 6: Calculator
- 7: Location
 - 1: Turn Location On
 - 2: Turn Location Off

0. Games

- 1: Push Push
- 2: Fly Ribbon
- 3: Spider Hunter

InUse Menu

- 1: Mute/UnMute

- 2: Call History
 - 1: Outgoing
 - 2: Incoming
 - 3: Missed
 - 4: Erase History
 - 5: Air Time
- 3: PhoneBook
 - 1: Find Name
 - 2: Add New Entry
 - 3: My Phone #
 - 4: Find Entry
 - 5: Group Search
 - 6: Add email
 - 7: Services
- 4: 3-Way Call
- 5: Messages
 - 1: Voice Mail
 - 2: Page/Text
 - 3: Erase Msgs
- 6: Calendar
 - 1: Today
 - 2: Month View
 - 3: Jump to Date
 - 4: Task List
 - 5: Countdown
 - 6: Alarm Clock
 - 7: Set Time
- 7: Version

Selecting a Character Input Mode

When prompted to enter text, the current text entry mode will appear above the  key in the lower right hand side of the display. There are four text entry modes:

1. T9 (English)
2. Alpha
3. Symbol
4. Number

To change the Input Mode, press  then the corresponding number on the keypad.

When entering text, use the indicated key to perform the following text entry functions:

Press  to cycle through T9 word matches.

Press  to insert a space.

Press  to enter a period (.) and other common symbols

Entering Characters by Tapping the Keypad

To enter characters by tapping the keypad, select the **abc** mode (see “Selecting a Character Input Mode” on page 51). Press the corresponding key until the desired character appears. By default, the first letter of a word is capitalized and following letters are lowercase.

Characters scroll in the following order:

- ▶  . , - ? ! ‘ @ : 1
- ▶  A B C 2
- ▶  D E F 3
- ▶  G H I 4
- ▶  J K L 5
- ▶  M N O 6
- ▶  P Q R S 7
- ▶  T U V 8
- ▶  W X Y Z 9
- ▶  0
- ▶  Shift
- ▶  Space

Note: If you press and hold a numeric key for two seconds, the corresponding number automatically is displayed. All alpha characters associated with the key are bypassed.

Entering Characters Using T9 Text Input

To enter characters using T9 Text Input, select the **T9 Word** mode (For more information, see "Selecting a Character Input Mode" on page 51).

T9 Text Input analyzes the letters you enter using an intuitive word database and creates a suitable word. (The word may change as you type.) If the word you want does not display after you have entered all the letters, press **O Next** to scroll through additional word selections. To accept a word and insert a space, press **# Space**.

If you make a mistake, press **CLR** to erase a single character. Press and hold **CLR** to delete an entire entry.

Entering Symbols and Numbers

To enter symbols, select the **Symbol** mode. (See "Selecting a Character Input Mode" on page 51). To enter a symbol, press the appropriate key indicated on the display.

To enter numbers, select the **Number** mode and press the appropriate key (For more information, see "Selecting a Character Input Mode" on page 51).

Adjusting Volume

In This Section

- ▶ **Changing the Ringer Volume**
 - ▶ **Silencing the Ringer**
 - ▶ **Adjusting Volume During a Conversation**
 - ▶ **Muting a Call**
-

With all the things that demand your attention in today's fast-paced world, it's important to tune-in to what really matters. Your phone gives you the ability to control your phone's volume with the touch of a button. Not only can you control what you hear, you can also control what your caller hears.

Changing Ringer Volume

To change the ringer volume, use the volume keys on the side of your phone when the phone is in standby mode with the flip open.

To change the ringer volume from the **Main Menu**:

1. Press  for **Menu** options.
2. Press  for **Sounds**.
3. Press  for **Ringer Volume**.
4. Press  for **Calls**.
5. Select **Off/Vibrate/1-Beep/Level 1-8/Ring+Vib**, and press .

Silencing the Ringer

To silence the ringer on incoming calls:

1. When the phone rings, press a volume key, or . Press  to answer the call.

Adjusting Volume During a Conversation

When you need to regulate the volume during a conversation, use the volume keys on the side of your phone to adjust the sound.

Muting a Call

There are times when it's necessary to mute a call so that your caller does not hear you or certain background noise. To mute a call, press and hold  for two seconds. To unmute a call, press and hold  for two seconds.

To **Mute** a call from the Main Menu:

1. Press  for **Menu** options, highlight **UnMute**.
 2. Press either  or .
- When the phone is muted, "**Mute**" displays.

To **UnMute** a call:

1. Press  for **Menu** options.
2. Highlight **UnMute**, and press  or .

Using Sprint PCS Service Features

In This Section

- ▶ **Using Caller ID**
 - ▶ **Responding to Call Waiting**
 - ▶ **Three-Way Calling**
 - ▶ **Forwarding Your Calls**
-

Now that you've mastered the basics, you can begin to focus on where you want to go. This section guides you step-by-step through the calling features that enhance your Sprint PCS Service. From Caller ID to Call Forwarding, using these features will help you make the most of your Sprint PCS Service.

Using Caller ID

Caller ID lets you know who's calling by displaying the number of the person calling when your phone rings. If the caller's name and number are already stored in your Internal Phone Book, the corresponding name appears with the number. In the same way, if you call someone who has this feature your phone number displays on their phone.

To block your phone number from being displayed for a specific outgoing call:

1. Press    .
2. Enter the number you want to call.
3. Press  (or highlight **Roam Call** and press ).

To permanently block your number, call Sprint PCS Customer Care.

Responding to Call Waiting

Call Waiting alerts you of incoming calls while you're on a call by sounding a beep. The display screen informs you that a call is coming in and shows the caller's phone number (if it's available and you are in digital coverage).

To respond to an incoming call while you're on a call:

- ▶ Press . (This puts the first caller on hold and answers the second call.)
- ▶ To switch back to the first caller, press  again.

Tip: For those calls where you don't want to be interrupted, you can temporarily disable Call Waiting by pressing     before placing your call. Call Waiting is automatically reactivated once you end the call.

Note: You don't have to worry about being interrupted during a Sprint PCS Wireless Web[®] call because Call Waiting and Three-Way Calling are automatically disabled.

Three-Way Calling

With Three-Way Calling, you can talk to two different people at the same time. When using this feature, the normal airtime rates will be charged for each of the two calls.

1. During a conversation, press .
2. Enter the number for the third party, and press .
3. When you are connected to the third party, press  once again to begin your Three-Way call.

If one of the people you called hangs up, you and the remaining caller stay connected. If you initiated the call and are the first to hang up, all three callers are disconnected.

Tip: You can also begin a Three-Way Call while on an existing call by displaying a phone number stored in your Internal Phone Book, Call History or Sprint PCS Wireless Web Messages. Highlight the desired number and press . Once the party answers, press  again to connect all parties together.

Forwarding Your Calls

Call Forwarding lets you forward all your incoming calls to another phone number — even when your phone is turned off. You can continue to make calls from your phone with Call Forwarding activated.

To Activate Call Forwarding:

1. Press   .
2. Enter the area code and phone number to which your calls should be forwarded.
3. Press . You will hear a tone confirming the activation of Call Forwarding.

To Deactivate Call Forwarding:

- ▶ Press    .
- ▶ Press . You hear a tone to confirm the deactivation.

Note: You are charged a higher rate for calls you have forwarded.

Managing Call History

In This Section

- ▶ **Viewing Call History (Incoming, Outgoing and Missed)**
 - ▶ **Call History Options**
 - ▶ **Making a Call From Call History**
 - ▶ **Saving a Phone Number From Call History**
 - ▶ **Erasing Call History**
-

The Call History helps you manage your time more effectively. It keeps track of incoming calls, calls made from your Sprint PCS® Phone and missed calls. This section guides you through accessing and making the most of your Call History.

Viewing Call History (Incoming, Outgoing and Missed)

You'll find your Call History invaluable. It is a list of the last 10 phone numbers or Internal Phone Book entries for calls you placed, received or missed. Call History makes redialing a number fast and easy. It is continually updated as new numbers are added to the beginning of the list and the oldest entries are removed from the bottom of the list.

Each entry contains the phone number (if it is available) and Internal Phone Book entry name (if the phone number is in your Internal Phone Book). Duplicate calls (same number and type of call) may only appear once on the list.

To view a Call History entry:

1. Press  for Main Menu.
2. Press  for **Call History**.
3. Press  for **Outgoing**,  for **Incoming**, and  for **Missed**.

Call History Options

For additional information and options on a particular call, highlight a Call History entry and press  followed by  to view these options. This feature gives you the option of selecting:

- ▶ **Talk** to call the phone number.
- ▶ **Save** to save the sender's phone number (if the number is not already stored in your Internal Phone Book). For more information see "Saving a Phone Number From Call History" on page 64.
- ▶ **Prepend** to add numbers to the beginning of the phone number. (For more information see "Prepending a Phone Number From Call History" on page 63.)

Making a Call From Call History

To place a call from Call History:

1. Scroll to highlight the required number and press  to complete the call.

Note: You cannot make calls from Call History to entries identified as No ID or Restricted. Calls labeled Data or Fax can only be dialed through a personal computer.

Prepending a Phone Number From Call History

If you need to make a call from Call History and you happen to be outside your local area code, you can add the appropriate prefix by following these steps:

1. Press  for Main Menu.
2. Press  for **Call History**.
3. Press  for **Outgoing**, press  for **Incoming**, or press  for **Missed**.
4. When the call list displays, scroll to highlight the desired call log, and press .
5. Press  for Menu options.
6. Press  to Prepend.
7. Enter the appropriate digits to prepend, and press  to be connected.

Saving a Phone Number From Call History

Your Sprint PCS Phone can store up to 250 Internal Phone Book numbers. Phone Book entries can store up to a total of 6 phone numbers and the entry's name can contain 12 characters.

To save a phone number from Call History:

1. Press  for Main Menu.
2. Press  for **Call History**.
3. Press  for **Outgoing**, press  for **Incoming**, or press  for **Missed**.
4. Scroll to highlight the phone number and press .
5. Press for  Menu options.
6. Press  to save.
7. Follow the prompts to complete storing the number to your Internal Phone Book.

Note: You cannot save phone numbers already in your Internal Phone Book or from calls identified as No ID or Restricted.

Erasing Call History

To erase a Call History or all Call Histories:

1. From standby mode press  to open the Main Menu.
2. Press  for **Call History**.
3. Press  for Erase History. This opens the **Erase History** menu. Scroll to highlight one of the options: **Outgoing**, **Incoming**, **Missed** and **All Calls**.
4. Press  to erase the calls within the selected option and follow the prompts, or press  to return to the previous menu.

Managing Messaging

In This Section

- ▶ **Message Types**
 - ▶ **New Message Alerts**
 - ▶ **Message Options**
-

Your Sprint PCS® Phone is always working to help you stay connected – even when you’re unavailable. With three types of messaging, you can depend on being notified of important information. This section steps you through the messaging functions available on your Sprint PCS Phone.

Setting Up Voicemail

The first thing you'll want to do after activating your phone is set up your voicemail.

Knowing When You Have Messages

There are several ways your Sprint PCS Phone alerts you of new messages:

- ▶ By displaying a message on the screen.
- ▶ By displaying  on the external LCD screen when the flip is closed.
- ▶ By playing the assigned ringer type.
- ▶ By the LED blinking red.
- ▶ By displaying  at the top of your screen for voicemail messages, Sprint PCS Web Messages, or Sprint PCS Web Alerts.

Message Types

There are three types of messaging features available from your Sprint PCS Phone's menu. You can receive voicemail, Sprint PCS Web Messages (also known as page/text or SMS messages) and Sprint PCS Web Alerts (also known as Browser messages) as long as your phone has enough memory to store them. If the memory is full, you will be prompted to delete old messages to make room.

- ▶ **Voicemail** automatically captures calls when you can't answer your phone or it is turned off. The voicemail system sends a notification to your phone when you have new voice messages or numeric pages.
- ▶ **Web Messages** include Sprint PCS Wireless Web Messages,* Sprint PCS Wireless Web Updates* and alerts that notify you of new Sprint PCS Wireless Web MailSM*. (For more information, see "Sending Web Messages" on page 68 or "Sprint PCS Wireless Web Update Options" on page 70.)
- ▶ **Web Alerts** let you know when you receive Sprint PCS Wireless Web Short MailSM* or an AOL Instant Message*. (For more information on each feature, see "The Sprint PCS Wireless Web" on page 106 or "Using AOL Instant Messenger Service" on page 115.)

* You may need to subscribe to the Sprint PCS Wireless Web to use these features, depending on your service plan.

New Voicemail Message Alerts

When you receive a new voicemail message, your phone alerts you and displays .

Important: When you are roaming off the Sprint PCS Network, you may not receive notification of new voicemail messages. It is recommended that you periodically check your voicemail by dialing 1 + area code + your Sprint PCS Phone Number. When your voicemail box answers, press  and enter your pass code.

Note: Your phone accepts messages even when it is turned off. However, you are only notified of new messages when your phone is turned on and you are in a Sprint PCS Service area.

Retrieving Your Voicemail Messages

You can review your messages directly from your Sprint PCS Phone or from any other touch-tone phone. To dial from your Sprint PCS Phone, you can either press and hold  for two seconds or use the menu keys.

Using One-Touch Message Access:

- ▶ Press and hold . Follow the system prompts.

Using the Menu Keys on Your Sprint PCS Phone to Access your Messages:

1. From standby mode press  for **Main Menu**.
2. Press  for **Voice Mail**.
3. Press  to **Listen**.

Note: You are charged for airtime minutes when you are accessing your voicemail from your Sprint PCS Phone.

Using a Phone Other Than Your Sprint PCS Phone to Access Your Messages:

1. Dial your Sprint PCS Phone Number.
2. When your voicemail box answers, press .
3. Enter your pass code.

Clearing the Voicemail Message Icon

Your phone may temporarily continue to display the icon after you have checked your voicemail messages.

To clear the icon from the display screen:

1. From standby mode press  for **Main Menu**.
2. Press  for **Voice Mail**.
3. Press  to **Reset**.

Sending Web Messages

Numeric Pages

Callers can send a numeric page to your phone when they reach your voicemail box. Numeric paging to a Sprint PCS Phone comes at no additional charge on any service plan that includes Sprint PCS Voicemail.

Note: The numeric paging option for your Sprint PCS Phone must be turned on for your phone to receive pages. This option can be set by entering your voicemail feature options.

Sprint PCS Wireless Web Messages

There are three ways to send a Sprint PCS Wireless Web Message to a Sprint PCS Phone:

- ▶ **E-mail** (yourphonenumber@messaging.sprintpcs.com).
- ▶ **Through the Sprint PCS Web site** – www.sprintpcs.com. Select the wireless web messaging link.
- ▶ **Using a messaging software** (TAP 1.5 compatible).

Sprint PCS Wireless Web Updates

To have Sprint PCS Wireless Web Updates automatically sent to your phone, see "Signing up for Sprint PCS Wireless Web Updates" on page 118.

New Sprint PCS Wireless Web Messages

When you receive a new Web Message, your phone notifies you. Press  to **Read** the message.

Sprint PCS Wireless Web Message Storage

Your Sprint PCS Phone can store up to 94 Web Messages. Each time you receive a new message, the amount of memory is decreased. The full memory percentage is updated instantly and displayed on the screen.

Displaying Sprint PCS Web Messages

To display a Wireless Web Message from the message notification alert, see "New Sprint PCS Wireless Web Messages" on page 68.

To display a Web Message from the **Main Menu**:

1. From standby mode, press  for **Main Menu**.
2. Press  for **Wireless Web**.
3. Press  for **Messages**.

Numeric Page Options

After you display a numeric page, press  to display the numeric page message options. To select an option, scroll to highlight it and press .

- ▶ **Talk** - Calls the highlighted phone number.
- ▶ **Save #** - Saves the sender's phone number if it is not already in your Internal Phone Book (if applicable).
- ▶ **Erase** - Erases the current numeric page.
- ▶ **Next Msg** - Moves forward to the next message.
- ▶ **Prev Msg** - Returns to the previous message.
- ▶ **Extract #s** - Extracts the phone numbers (if there are numbers contained in the text message.) (For further information see "Extracting Phone Numbers from a Web Message" on page 70.)

Extracting Phone Numbers from a Web Message

After you display a Sprint PCS Web message, press  to display message options.

To extract a phone number contained in the message:

1. Highlight **Extract #s** and press . All the phone numbers contained in the message are displayed.
2. Highlight the number you want to extract and press .

The following options are displayed:

- ▶ **Call** to dial the extracted phone number
 - ▶ **Save Phone** to save the extracted phone number to the Internal Phone Book.
3. Scroll to select your option and press  to continue.

Erasing All Wireless Web Messages

To erase all Wireless Web messages:

1. Press for  **Main Menu**.
2. Press  for **Wireless Web**.
3. Press  for **Erase Msgs**. You are asked to choose from two options, **Page/Text** or **Web Alerts**. Choose the desired message type.
4. Using the Navigation key, highlight **Yes** and press  or press  to exit.

Note: If the message icon continues to display in standby mode, a new or unread message exists in another category.

Sprint PCS Wireless Web Update Options

To have Sprint PCS Wireless Web Updates automatically sent to your phone, see "Signing up for Sprint PCS Wireless Web Updates" on page 118.

After you display a Sprint PCS Wireless Web Update, press  to display Sprint PCS Wireless Web Update options. To select an option, highlight it and press .

New Web Alerts

When you receive a new Web Alert, your phone notifies you.

Displaying Web Alerts

You are notified of new Web Alerts by the  icon.

1. Press for  **Main Menu**.
2. Press  for **Wireless Web**.
3. Press  for **Web Alerts**.
4. Highlight an alert from the list and press  to read.

Using Your Internal Phone Book

In This Section

- ▶ **Finding Internal Phone Book Entries**
 - ▶ **Internal Phone Book Entry Options**
 - ▶ **Adding a Call Alarm From the Internal Phone Book**
 - ▶ **Selecting a Ringer Type**
 - ▶ **Dialing Sprint PCS Services**
-

Now you know the basics that help make it easier to stay in touch with people and information. This section helps you make the most of your contacts and use your time more effectively when you're trying to connect with the important people in your life.

Finding Internal Phone Book Entries

There are several ways to display your Internal Phone Book entries. Follow the steps outlined in the sections below to display entries from the Internal Phone Book menu.

Finding Names

You can review all the entries stored in your Internal Phone Book or find an entry quickly by following these simple steps:

1. From standby mode, press  for **Main Menu**.
2. Press  for **Phone Book**.
3. Press  for **Find Name**. The list of names is displayed in alphabetical order. (The Speed Dial number displays next to the entry.)
4. Enter the first letter of the person's name you want to find. Use the Navigation key to scroll through the list of possible matches. Additional letters may be entered to narrow the name matches.

Finding Entries

To find an Internal Phone Book entry by its entry number:

1. From standby mode, press  for **Main Menu**.
2. Press  for **Phone Book**.
3. Press  for **Find Entry**. The list of names is displayed in numeric order of the Speed Dial number

Internal Phone Book Entry Options

When you display an Internal Phone Book entry, the following options are displayed. To select an option, highlight it and press .

- ▶ **Talk** to call the current phone number.
- ▶ **Add Phone#** to add a phone number.
- ▶ **Edit** to edit the current entry.
- ▶ **Prepend** to add numbers at the beginning of an existing phone number.
- ▶ **Erase** to erase the current entry.

Adding a Phone Number to an Internal Phone Book Entry

To add a phone number to an entry:

1. From standby mode, press  for **Main Menu**.
2. Press  for **Phone Book**.
3. Press  for **Find Name**. The list of names is displayed in alphabetical order. (The Speed Dial number displays next to the entry.)
4. When the desired name is found, highlight it and press .
5. Press  and press  for **Add Phone #**.
6. Enter the new number using the keypad and press .
7. Select the desired Label and press .
8. Press  to save the entry and return to standby mode.

Note: Phone numbers labeled Fax or Data can only be dialed through a personal computer.

Editing an Internal Phone Book Entry

To make changes to an entry:

1. From standby mode, press  for **Main Menu**.
2. Press  for **Phone Book**.
3. Select either  for **Find Name**, or  for **Find Entry**.
4. When the desired name is found, highlight it and press .
5. Press  for **Menu** options.
6. Press  for **Edit**.

To select an option, highlight it and press .

- ▶ **Entry** is the memory location of the phone book entry. There are 250 memory locations available.
- ▶ **Speed Dial** allows you to choose which number saved in a particular entry will be the Speed Dial number. Only one number per entry can be set to Speed Dial.
- ▶ **Secret** hides the phone number and user information from displaying on the screen. Instead, Secret is displayed.

Note: These numbers can still be dialed, but the name & number will be hidden.

- ▶ **Home** is used as a label when you save a home number.
- ▶ **Work** is used as a label when you save a work number.
- ▶ **Mobile** is used as a label when you save a mobile number.
- ▶ **Pager** is used as a label when you save a pager number.
- ▶ **Fax** is used as a label when you save a fax number.
- ▶ **No Label** is used when you save a number that does not conform to one of the other labels.
- ▶ **E-mail** is used to save an email address in the internal phone book.
- ▶ **Group** is used to save the phone book entry into a group. The default groups are: No Group, Friend, Family, Colleague, or VIP.
- ▶ **Name Ringer** is used to designate a specific ringer sound when you receive a call from the number saved in the phone book.

Note: “Default” means the global ringer selected for all incoming calls will be played.

Adding an E-mail Address to an Internal Phone Book Entry

To add an email address to an entry:

1. From standby mode, press  for **Main Menu**.
2. Press  for **Phone Book**.
3. Press  for **Add email**.
4. Enter the new email address using the keypad and press .
5. Save as a New Entry or highlight an existing entry and press .
6. Press  to save the entry and return to standby mode.

Dialing Sprint PCS Services

You must be in digital mode to access Sprint PCS Services.

To dial a service:

1. From standby mode, press  for **Main Menu**.
2. Press  for **Phone Book**.
3. Press  for **Services**.
4. Highlight **Account Info**, **Customer Care**, **Dir Assist**, or **Prepaid SVC** and press .
5. Press .

My Sprint PCS Phone Number

To display your phone number:

1. From standby mode, press  for **Main Menu**.
2. Press  for **Phone Book**.
3. Press  for **My Phone#**.

Changing Your Phone's Settings

In This Section

- ▶ **Changing the Greeting**
 - ▶ **Adjusting the Volume**
 - ▶ **Ringer Types**
 - ▶ **Sprint PCS Ringers & More**
 - ▶ **Selecting Ringer Types**
 - ▶ **Changing the Contrast and Backlight Setting**
 - ▶ **Data/Fax Mode**
-

This section describes how you can change your phone's settings to best suit your requirements. Take a few moments to review these options and add or adjust the settings that are right for you.

Changing the Greeting

The greeting can be up to 16 characters and is displayed on the first line of your phone's display screen in standby mode.

To change your greeting:

1. From standby mode, press  for **Main Menu**.
2. Press  for **Setup/Tool**.
3. Press  for **Display**.
4. Press  for **Greeting**.
5. Press  for at least two seconds to erase the existing greeting.
6. Press  to display the text entry modes. Highlight the desired mode and press  to select.
7. Type in the new greeting and press .

Setting the Language of your Phone

Your phone can display all menus and messages in either Spanish or English; all verbal prompts will also be spoken by the phone in the selected language. It's quick, easy and very convenient for bilingual families or friends. To change the language of your phone:

1. From the **Main Menu** press  for **Setup/Tool**.
2. Press  for **Language**.
3. Scroll to highlight **English** or **Spanish**.
4. When the desired option displays, press .

Adjusting the Ringer Volume

To adjust the ringer volume:

1. From standby mode, press  for **Main Menu**.
2. Press  for **Sounds**.
3. Press  for **Ringer Volume**. The following options display: **Calls**, **Messages** and **Alarms**.
4. Select the desired option and press .
5. Scroll to the desired **Ringer Volume**, and press .

Tip: You can use the volume control keys located on the side of the phone to adjust the ringer volume in standby mode with the flip open or the voice volume during a call.

Ringer Types

Ringer types help you identify incoming calls and messages. You can assign Ringer Types to individual Internal Phone Book entries, calls and messages.

- ▶ **Preprogrammed Ringers** include a variety of standard ringer types and familiar music.
- ▶ **Vibrating Ringer** alerts you to calls or messages without disturbing others.
- ▶ **Downloaded Ringers** allows you to download custom ringers from the wireless web.

Selecting Ringer Types for Voice Calls

To select a ringer type for voice calls:

1. From standby mode, press  for **Main Menu**.
2. Press  for **Sounds**.
3. Press  for **Ringer Type**.
4. Press  for **Voice Calls**.
5. Select either **with Caller ID** or **no Caller ID**, and press .
6. Listen to the available **Ringer Types** and press  to select.

Tip: If your ringer is set to vibrate or Off, you can review the ringer types but will not hear them.

Sprint PCS Ringers & MoreSM

With Sprint PCS Ringers & More, you can express your personality with an array of downloadable ringers and graphics. Sprint PCS Ringers & More is an optional service you can add to your monthly service plan rate.

Downloading Ringers and Graphics

To download an available ringer or graphic to your phone:

1. From the main menu, highlight Wireless Web and press .
2. Highlight Downloads and press .
3. Highlight Get New and press . The Sprint PCS Wireless Web Browser will launch.

Note: You are charged for airtime minutes when using the Sprint PCS Wireless Web Browser.

4. Using your navigation key to scroll up or down, select Graphics or Ringers, highlight the OK softkey and press . (For more information on navigating the Sprint PCS Wireless Web, see "Using the Sprint PCS Wireless Web Browser" on page 109.)
5. Select an item to download, highlight the OK softkey and press . The selected ringer or graphic will automatically be downloaded to your phone.
6. Press  to return to the Downloads menu or  to return to the main menu.

Note: You may store up to five downloaded ringers and five downloaded graphics in addition to those originally programmed into your phone. If you download more than five ringers or graphics, a message is displayed that says "No Additional Memory Available".

Assigning Downloaded Ringers and Graphics

Downloaded ringers and graphics may be assigned directly from the Downloads menu and are also available through the Settings menu.

To assign a downloaded ringer or graphic through the Settings menu, see "Selecting Ringer Types for Voice Calls" on page 81, "Selecting Ringer Types for Messages" on page 83, or "Changing the Greeting" on page 80.

To assign a downloaded ringer or graphic from the Downloads menu:

1. Press .
2. Press  for **Wireless Web**.
3. Press  for **Downloads**.
4. Press  for **Ringers** or  for **Idle Screens**.
5. Follow the screen prompts to continue.

For Ringers:

- ▶ **Voice Calls with Caller ID** to assign a ringer for incoming calls with Caller ID.
- ▶ **Calls With No Caller ID** for incoming calls without Caller ID.

- ▶ **Messages Voicemail** for incoming voicemail messages.
- ▶ **Messages Page** for incoming page messages.
- ▶ **Messages Text** for incoming text messages.
- ▶ **Messages Web Alerts** for incoming web alert messages.
- ▶ **Alarms** this setting allows you to select different ringers for alarms.
- ▶ **Data/Fax In** for incoming Data/Fax calls.

For Graphics:

- ▶ **Idle Screen** to assign a graphic to display while the phone is in Idle mode.

Selecting Ringer Types for Messages

To select a ringer type for messages:

1. From standby mode, press  for **Main Menu**.
2. Press  for **Sounds**.
3. Press  for **Ringer Type**.
4. Press  for **Messages**.
5. Select **Voice Mail, Page, Text, or Web Alerts** and press .
6. Listen to the available **Ringer Types**, and press  to select. For information on downloadable ringers, see "Selecting Ringer Types for Voice Calls" on page 81).

Selecting Ringer Types for Alarms

To select a ringer type for alarms:

1. From standby mode, press  for **Main Menu**.
2. Press  for **Sounds**.
3. Press  for **Ringer Type**.
4. Press  for **Alarms**.
5. Listen to the available **Ringer Types**, and press  to select.

Selecting Ringer Types for Data / Fax In

To select a ringer type for data/fax in:

1. From standby mode, press  for **Main Menu**.
2. Press  for **Sounds**.
3. Press  for **Ringer Type**.
4. Press  for **Data/Fax In**.
5. Listen to the available **Ringer Types**, and press  to select.

Changing the Backlight Time Length

The backlight setting lets you select how long the display screen and keypad are backlit after any key press is made.

To change the backlight setting:

1. From standby mode, press  for **Main Menu**.
2. Press  for **Setup/Tool**.
3. Press  for **Display**.
4. Press  for **Backlight**.
5. Select from the following options:
 - ▶ Flip Open
 - ▶ 30 Seconds
 - ▶ 8 Seconds
 - ▶ Off
6. Press  to save and exit.

Note: Long backlight settings affect the battery's talk and standby times.

Connect Alert

Your phone has the ability of sounding a ring tone alert whenever a call is connected. To setup this option:

1. From standby mode, press  for **Main Menu**.
2. Press  for **Sounds**.
3. Press  for **Alerts**.
4. Press  for **Connect**.
5. Highlight On or Off using the navigation key. Press  to save.

Disconnect Alert

Your phone has the ability to sound a disconnect alert tone when the other caller completes the call and hangs up. To setup this option:

1. From standby mode, press  for **Main Menu**.
2. Press  for **Sounds**.
3. Press  for **Alerts**.
4. Press  for **Disconnect**.
5. Highlight On or Off using the navigation key. Press  to save.

Changing the Contrast

To adjust the contrast on the phone's display:

1. From standby mode, press  for **Main Menu**.
2. Press  for **Setup/Tool**.
3. Press  for **Display**.
4. Press  for **Contrast**.
5. Select a setting from **Lowest**, **Low**, **MED**, **High**, or **Highest** and press  to select.

Tip: The phone must be on a digital network to send or receive data and faxes.

Receiving Data

To receive data with your phone:

1. Make sure that your phone is connected to your computing device and is powered “On.”
2. From standby mode, press  for **Main Menu**.
3. Press  for **Wireless Web**.
4. Press  for **Connection**.
5. Select **Data/Fax In Incoming Data only** and press . (Notice that the phone displays “**No incoming voice calls can be received**”. Your phone returns to standby mode and displays ***Data Only***.)

Returning to Voice Mode

To return to standby mode from Data/Fax mode:

1. Make sure that your phone is connected to your computing device and is powered “On.”
2. From standby mode, press  for **Main Menu**.
3. Press  for **Wireless Web**.
4. Press  for **Connection**.
5. Select **Data/Fax Off: Voice Only** and press . (Notice that the phone displays “**No incoming data/fax calls can be received**”. Your phone returns to standby mode.)

Note: The phone always powers up in standby mode, even if it was powered down in Data/Fax mode. The phone also returns to standby mode if the data cable is disconnected.

Setting Your Phone's Security

In This Section

- ▶ **Accessing the Security Menu**
 - ▶ **Locking Your Phone**
 - ▶ **Unlocking Your Phone**
 - ▶ **Restricting Calls**
 - ▶ **Using Special Numbers**
-

By using the security setting on your Sprint PCS® Phone, you receive peace of mind without sacrificing flexibility. With several options available, you can customize your phone to meet your personal needs.

Accessing the Security Menu

You must enter your lock code to view the Security menu. If you forget your lock code, try using the last four digits of your Social Security number, the last four digits of your phone Number, or “0000”.

To access the Security menu:

1. From standby mode, press  for **Main Menu**.
2. Press  for **Setup/Tools**.
3. Press  for **Security**.
4. Enter your lock code, and the **Security** menu displays.

Locking Your Phone

When your phone is locked, you can only receive incoming calls or make calls to 911, Sprint PCS Customer Care or special numbers.

To lock your phone:

1. Access the **Security** menu.
2. Press  for **Lock Phone**. The available options are:
 - ▶ Unlocked
 - ▶ On Power Up
 - ▶ Lock Now
3. Select **Lock Now** and press .

Unlocking Your Phone

To unlock your phone:

1. Press .
2. Enter your lock code.

Tip: If you can't recall your lock code, try using the last four digits of either your Social Security number or Sprint PCS Phone Number or try 0000. If none of these work, call Sprint PCS Customer Care at 1-888-211-4PCS (4727).

Changing the Lock Code

To change your lock code:

1. Access the **Security** menu.
2. Press  for **Change Lock**. Your **Lock Code** number displays.
3. Enter a new **Lock Code** number (this will override your original lock code number), and press .

Calling in Lock Mode

You can place calls to 911 and to your special numbers when in lock mode.

To place an outgoing call in lock mode:

- ▶ To call an emergency number, special number, or Sprint PCS Customer Service, enter the phone number and press .
- ▶ To place normal outgoing calls. Press  to display the lock code screen, enter the lock code. Enter the phone number, and press  to complete the call.

Using Special Numbers

You can hide up to three phone numbers that require your lock code to make them “special.”

All three special numbers can be manually dialed at any time, even when your phone is locked.

To make a number special:

1. From standby mode, press  for **Main Menu**.
2. Press  for **Setup/Tool**.
3. Press  for **Security**.
4. Enter the phone's lock code, the **Security** menu displays.
5. Press  for **Special #**.
6. Select an available space and press , or just enter the space's number. Enter the phone number, and press .

Erasing Special Numbers

To erase a special number:

1. Access the **Security** menu.
2. Press **3 DEF** for **Special #**.
3. Select the number that you wish to erase, and press **OK**.
4. Press **CLR** to erase the number, and press **OK**.

Erasing the Internal Phone Book

You can erase all the numbers stored in your Internal Phone Book. This is useful if you want to loan, or give your phone to a friend or family member.

To erase your Internal Phone Book:

1. Access the **Security** menu.
2. Press **4 GHI** for **Erase PBook**.
3. Using the Navigation key, select **Yes**.

If you do not wish to erase your Internal Phone Book, select **No** and press **OK** to return to the previous menu.

Resetting Your Phone

Resetting your phone returns all setup options to the factory's default settings. All of your important personal data (Internal Phone Book, Voice Recordings), are unaffected by resetting your phone.

To reset your phone:

1. Access the **Security** menu.
2. Press **5 JKL** for **Reset Phone**.
3. Select **Yes** and press **OK**.
4. Select **Yes** again and press **OK** to confirm and reset the phone to the factory defaults.

The phone reboots (turns itself off and back On), restores the default settings, such as ringers, erases your messages and then returns to standby mode.

Personal Information Management

In This Section

- ▶ **Adding an Event to the Scheduler**
 - ▶ **Event Alerts**
 - ▶ **Adding a Call Alarm to the Scheduler**
 - ▶ **Viewing the Scheduler Calendar**
-

Your Sprint PCS® Phone has been equipped with several personal information management features to help you manage your busy lifestyle. These features turn your phone into a time management planner that helps you keep up with your contacts, schedules and commitments. It takes productivity to a whole new level.

Accessing the Scheduler

Your scheduler helps organize your time and reminds you of important events.

How To Access Your Scheduler

1. From standby mode, press  for **Main Menu**.
2. Press  for **Calendar**.
3. Scroll to highlight an option. The available options are:
 - ▶ Today
 - ▶ Month View
 - ▶ Jump To Date
 - ▶ Task List
 - ▶ Countdown
 - ▶ Alarm Clock
 - ▶ Set Time
4. Press  to open the selected option.

Calendar

Calendar functions allow you to schedule personal events and view them in an easily read calendar format. These functions are also available to you when you are talking on your phone.

Today

Allows you to schedule events for today, that will automatically appear on your “Today” events schedule for that day. You can schedule up to nine events for the current day with each event’s start and end time. You can even have your phone alert you before an event starts.

Month View

Month View allows you to view a calendar of the current month, a past month, or a future month. In Month View, the current date is highlighted on the calendar. Days with scheduled events are *underlined*. When in Month View, the navigation keys work like this:

- ▶ Moving the scroll left or right allows the calendar to be moved backward or forward a day.
- ▶ Moving the scroll up or down moves the calendar by one week.

- ▶ Pressing the volume keys up or down allows the calendar to move month to month.

Jump To Date

Jump To Date allows you to specify the calendar date you want to view. Arriving at the desired date, you can enter, edit, and/or erase events in your calendar.

Task List

Allows you to compile a list of items to be completed. Your phone can store and manage 20 “Task List” items.

Countdown

Countdown allows you to find out how much time will elapse between the time entered and an event scheduled.

- ▶ Press the correct volume key to scroll between A.M. or P.M. or press **2 ABC** for A.M., or **7 PQRS** for P.M.
- ▶ Countdowns can be entered for dates between the years 1980 and 2099.

Alarm Clock

Your phone has an alarm clock with three separate alarms. Each alarm can be set once, or daily at a programmed time.

Set Time

Your phone keeps the time and date directly from the Sprint PCS system while inside the Sprint PCS Service Area. If you roam outside of the Sprint PCS Service Area, or turn on your phone in an analog roaming area, you'll need to set the time manually.

When you turn on your phone in Analog Mode you will be prompted to enter the current date and time. Press the appropriate keys to enter the correct date and time in a numeric mode. Time is represented as hh:mm A/P and the date is represented as 00/00/0000.

To Set Time using the menu options

1. From standby mode, press  for **Main Menu**.
2. Press  for **Calendar**.
3. Press  for **Set Time**.

Tip: Use the numeric keys to enter the current time and date.

Adding New Events

1. From standby mode, press  for **Main Menu**.
2. Press  for **Calendar**.
3. Press  for **Today**.
4. Press  for input mode options **T9 (English)**, **Alpha**, **Symbol**, and **Number**. Select an option and press  to activate.
5. Enter the event's title or name information. You can enter up to 32 characters. For more information on Text and Symbol Entry refer to "Selecting a Character Input Mode" on page 51. The default entry mode is T9 (English).
6. Press  to continue to the **Next Step**.
7. Enter the start time and move the scroll key down once to move to the date field. Enter the date, and press .
8. Enter the end time and move the scroll key down once to move to the date field. Enter the date if different from what is shown, and press .
9. Scroll to select the alarm option of choice, and press . The options are: **10 minutes Before**, **On time**, **No Alarm**, **1 hour Before**, or **30 minutes Before**.

Tip: Use the volume control keys to scroll by month through the Calendar, or scroll up or down to view by week.

10. Press .

- Notice the heading “Event” at the top of the display screen. This informs you of how many events you have scheduled for the day and the number of the event you are displaying.

11. Press and hold  to return to the **Month View**.

Viewing an Event

The Event screen displays the number of events listed for the current day. Scroll through the other events. If no events are scheduled, you will be prompted to add a new event.

Editing an Event

1. From standby mode, press  for **Main Menu**.
2. Press  for **Calendar**.
3. Press  for **Today**.
4. Select an existing event, and press .
5. Press  to edit that event, and continue to press  until the information you want to edit displays. Enter the new information over the old, then press . (If you are editing an alarm, scroll to the “New” option.)
6. Press  until storing displays.
7. Press  to return to the **Calendar**.

Erasing an Event

1. From standby mode, press  for **Main Menu**.
2. Press  for **Calendar**.
3. Press  for **Today**.
4. Scroll to highlight an existing event, press  and press , to erase. You are given the option to enter a new event. If you do not wish to enter a new event, press and hold  to return to the **Month View**.

Alarm Clock

Note: Default alarm times are 10 minutes for Meetings, Events and Dining Appointments, 24 hours for Special Occasions and zero minutes for Call Alarms.

Your phone has an Alarm Clock feature with three separate alarms. Each alarm can be set once, or daily at a programmed time of your choosing.

To set the Alarm Clock:

1. From standby mode, press  for **Main Menu**.
2. Press  for **Calendar**.
3. Press  for **Alarm Clock**.
4. Scroll to highlight **Alarm #1, #2, or #3**, and press , or select the number next to desired alarm.
5. Select **Daily, Once** or **Reset** for the alarm, and press .
6. Enter the date and time for the alarm. Use the volume keys on the side of the phone to select AM. or P.M., or press  for A.M., or  for P.M. Note that no date setting is available for a **Daily** alarm.
7. Press .

Erasing a Programmed Alarm

1. Repeat steps 1 through 3 above.
2. Scroll to highlight the **Alarm#** you wish to set and press . The following options display: **Daily, Once** or **Reset**.
3. Use the navigation key to select **Reset**.

Using the Voice Services of Your Sprint PCS Phone

In This Section

► Using Voice-Activated Dialing

This section explains the features associated with your phone's Voice Services. The easy-to-follow instructions explain how to make calls or go to a menu by simply speaking a command. You'll also learn how to record memos and personal ringers.

Using Voice-Activated Dialing

Your phone features voice-activated dialing. You can call up to 10 stored entries by speaking the individual's or company's name into the microphone. Using the voice-activated dialing option requires that you first program the phone to recognize the name of the individual or company you are calling.

Tips on recording names

- ▶ Avoid recording similar names phonetically. If you record a name similar to one that is already stored in a voice-dial memory, the phone requests another name.
- ▶ Avoid recording in a noisy place.
- ▶ Speak clearly and naturally.
- ▶ Avoid very long or very short names. Names with two to five syllables are recommended.
- ▶ If a voice dial entry does not properly connect, you may need to record the name and number again.

Note: Record Voice Dial tags in a quiet environment and without the aid of an accessory (for example, a headset or hands-free car kit).

Programming the Phone for Voice Dialing

Programming your phone for voice activated dialing is easy. The phone provides voice prompts and screen displays to guide you through the recording process. To program the phone for voice activated dialing:

1. From the **Main Menu** press  for **Voice Dial**.
2. Press  for **Record**. The phone will prompt you to say the name you want to program.
3. Wait for the beep and then say the name. For best results, use names with at least two syllables, or use both a first and last name. The phone stores the name as a “first” sample, and then prompts you to say the name again.
4. Respond to the prompt by repeating the name after the beep exactly as you did the first time. The phone stores the name as a second sample and then requests the phone number.
5. Enter the phone number on the keypad.

6. To store the phone number, press . The number you entered displays, along with the notification 'Recorded'. If the number you entered matches a name/number already stored in your Internal Phone Book, then the name also displays.
7. The screen then returns to the **Voice Dial** menu.

Setting Up Voice Dial

Voice Dial is always active once you have programmed the phone with Voice Dial entries. To place voice activated calls, press and hold . Then say the name into the phone after you hear the voice prompt and the beep.

You can also initiate a voice activated call by opening the flip, when this feature is activated.

To change the Voice Dial setup options:

1. From the **Main Menu** press  for **Voice Dial**.
2. Press  for **Set Active**.
3. Press the Navigation key up or down to scroll between the following options:
 - ▶ **TALK Only** Enables voice dialing by pressing and holding .
 - ▶ **TALK / Flip** Enables voice dialing by pressing and holding  (when the phone is open), or by simply opening the phone's flip cover.
4. Select the desired option and press .

Placing a Call Using Voice Dial

To place a call if Voice Dial is inactive:

1. Open the phone.
2. Press and hold down the  key.
3. At the voice prompt, say the name into the phone.
 - ▶ The phone automatically places the call if it recognizes the name.
 - ▶ If the phone does not recognize the name, it says **Who would you like to call?** again and prompts **Locating Name.**
 - ▶ If the phone is unable to recognize the name after two attempts, it says **The name cannot be recognized** and prompts **Cannot recognize name. Please check name.** The phone returns automatically to standby mode, and you can try the call again later.

Reviewing Voice Dial Entries

To review Voice Dial entries:

1. From the **Main Menu** press  for **Voice Dial.**
2. Press  for **Review.** A list of your stored voice dial numbers display, (the names also display if stored in the Internal Phone Book).
3. Press the associated key to select the desired entry, or scroll to the desired entry and press . The recorded name plays audibly. You can scroll through entries without having to listen to each one, or you can listen to them all as they play in order.
4. Press  to return to the previous screen.

Erasing Voice Dial Entries

To erase an individual Voice Dial entry:

1. From the **Main Menu** press **7 PQRS** for **Voice Dial**.
2. Press **2 ABC** for **Review**. A list of entries are displayed.
3. Press the associated key to select the desired entry, or scroll to highlight the desired entry, and press **END**. The recorded name plays audibly and you are prompted with **"OK: Erase"**.
4. Press **END** to **Erase** that entry.
5. Press the navigation key left or right to highlight **"Yes"** or **"No"**.
6. Press **END**.

To erase all Voice Dial entries:

1. From the **Main Menu** press **7 PQRS** for **Voice Dial**.
2. Press **3 DEF** for **Erase All**. You are given a confirmation screen and a confirmation voice prompt.
3. Press **END** to **Erase** all Voice Dial entries or **CLR** to return to the previous screen.

Experiencing Sprint PCS Wireless Web®

In This Section

- ▶ **Launching and Using the Sprint PCS Wireless Web Browser**
 - ▶ **Creating and Finding Bookmarks**
 - ▶ **Using Sprint PCS Wireless Web MailSM**
 - ▶ **Using AOL Instant MessengerSM Service**
 - ▶ **Using Sprint PCS Wireless Web Short MailSM**
 - ▶ **Signing Up for Sprint PCS Wireless Web Updates**
 - ▶ **Setting Up a Sprint PCS Wireless Web Connection**
-

By now you've discovered the great features that come with your Sprint PCS® Phone. Now it's time to experience the Sprint PCS Wireless Web. Let the adventure begin.

The Sprint PCS Wireless Web

With the Sprint PCS Wireless Web and your wireless Internet-ready phone, you have access to many features via the wireless Internet:

- ▶ **The Sprint PCS Wireless Web Browser** allows you to view specially-designed versions of popular web sites.
- ▶ **Sprint PCS Wireless Web Mail** lets you send and receive email quickly and easily.
- ▶ **The AOL Instant Messenger Service** lets you keep in touch with family and friends via two-way instant messaging.
- ▶ With **Sprint PCS Wireless Web Short Mail**, you can use a person's Sprint PCS Phone Number to send instant text messages to their Internet-ready Sprint PCS Phone – and they can send messages to you.
- ▶ **Sprint PCS Wireless Web Updates** let you receive daily information updates, including weather, stock quotes and sports scores.

Note: Sprint PCS Wireless Web service will not work when roaming off the Sprint PCS Nationwide Network and may not be available in select affiliate areas.

The Sprint PCS Wireless Web Browser

Your phone comes equipped with a Browser, which allows you to access up-to-the minute information through the Sprint PCS Wireless Web.

You can view specially-designed versions of popular Internet sites, including Yahoo!®, Amazon.com®, The Weather Channel® and more. Browsing the Sprint PCS Wireless Web using your phone is different than using a home computer because sites display specialized text and reduce their graphics.

The Browser connects to the Internet by placing a call. Note that  appears on the display whenever a call is in progress, just as with a regular voice call. Service charges vary depending on your service option.

Launching the Sprint PCS Wireless Web Browser

To launch the Sprint PCS Wireless Web Browser:

- 1. Press  for **Main Menu**.
- 2. Press  for **Wireless Web**.
- 3. Press  for **Start Browser**. Phone prompt states: “Charges will apply to Browser calls. Start Wireless Web?”

Or:

- 1. Press  to launch the MiniBrowser or from standby mode.

The first time you use the Browser, you'll be prompted to enable the security feature. This automatic process will take 3–6 minutes to complete and it occurs just once. When the process is complete, you're ready to start using the Sprint PCS Wireless Web.

Following the security setup, you'll see the Sprint PCS Wireless Web Home Page. This is the main page for the Browser and it gives you access to all the sites in the Sprint PCS Wireless Web. The next time you use the Browser, you may not see the home page at first because the Browser will display the page you were viewing when you last exited the Browser.

MY WIRELESS WEB	PAGE 2
1 My Wireless Web	1 What's New?
2 Messaging	2 Shopping
3 Games	3 Travel
4 Web Portals	4 Tools & Reference
5 Entertainment	5 People
6 Finance	6 Business Tools
7 Sports	7 Search...
8 News & Weather	8 Go To...
9 @ SprintPCS	OK MENU
More...	
OK MENU	

The Sprint PCS Wireless Web Home Page

Note: The Sprint PCS Wireless Web Home Page is subject to change.

You may notice that sometimes the Browser will launch without placing a call. This is because the phone stores recently viewed pages in its memory cache. The Browser will connect automatically when you access a page that's not stored in the cache. This reduces the wireless web usage times.

If the phone has been inactive for a while and a new wireless Internet site has not been requested, the Browser will automatically disconnect. The Browser will remain active – only the connection will end. The Browser will automatically reconnect when you go to a wireless Internet site that's not stored in the phone's memory cache. For this reason, you may find that you are billed for several network connections within a single session. This is normal and is designed to minimize airtime charges.

When launching the Browser, you may need to take an extra step or see a reminder that Browser calls will be charged. (See “Web Guard” below for more information.)

Web Guard

The Web Guard requires you to take an extra step each time you launch or exit the Browser. To change the Web Guard setting:

1. Press  for **Main Menu**.
2. Press  for **Wireless Web**.
3. Press  **Web Guard**.
4. The following options are displayed:
 - ▶ **None** to disable the Web Guard
 - ▶ **To Start** to require an extra step when launching the Browser.
 - ▶ **To End** to require an extra step when exiting the Browser.
 - ▶ **Both** to require an extra step when launching and when exiting the Browser.
5. Select the desired choice and press .

Using the Sprint PCS Wireless Web Browser

Using the Browser is easy once you've learned a few basics. Here are some tips for navigating the Sprint PCS Wireless Web:

Scrolling

As with other parts of your phone's menu, you'll have to scroll up and down to see everything on some wireless Internet sites.

- ▶ Scroll up or down to view line by line. You can also use the volume keys on the side of your phone to quickly scroll one page at a time rather than one line at a time.

Tip: The tenth item in a numbered list may be selected by pressing the **0 next** key on your phone's keypad, even though the number 0 doesn't appear on the screen.

Going to a Wireless Internet Site

From the Sprint PCS Wireless Web Home Page, you can go to a wireless Internet site simply by highlighting the desired site name and activating the OK softkey. Note that the list of wireless Internet sites extends beyond one page.

- ▶ Select **More...** to see additional site listings.
- ▶ To access a site that does not appear on the Home Page, use the **Go To...** function (on page 2 of the Home Page). You'll be required to enter the URL (site address) for the site you want to visit. It is not necessary to enter "http://" before the site name. Only HDML and WML sites are accessible.

Going Back

- ▶ To go back one page, press **CLR**.

Entering Text

Some wireless Internet sites require that you enter text using your phone's keypad. See "Entering Characters Using T9 Text Input" on page 53 or "Entering Characters by Tapping the Keypad" on page 52.

Creating a Bookmark

Bookmarks allow you to store the address of favorite wireless Internet pages for easy access at a later time.

To create a bookmark:

1. Navigate to the desired mobile web site using the Wireless Web browser.
2. Press and hold  to display the **Browser Menu**.
3. Press  for **Mark Site**.
4. Press  to save the bookmark to the Bookmark List.
5. Press  to exit the browser menu and return to the web page.

Note: Bookmarking a page does not store the page contents, just its address.

Note: Some pages cannot be bookmarked. Bookmark availability is determined by web site developers.

Accessing a Bookmark

To access a bookmark from the Sprint PCS Home Page:

1. Press and hold  to display the **Browser Menu**.
2. Press  for **Bookmarks**.
3. Select the desired bookmark from the list and press .
4. The bookmarked web page is displayed.

Deleting a Bookmark

1. Press and hold  to display the **Browser Menu**.
2. Press  for **Bookmarks**.
3. Using the navigation button, select the bookmark that you want to delete.
4. Press .
5. Press  for **Erase**.
6. Press  to confirm deletion or  to cancel.

The Browser Menu

The Browser Menu contains several special functions. To access the Browser Menu, press and hold .

- ▶ **Reload** to refresh the display.
- ▶ **Home** to access the Sprint PCS Wireless Web Home Page.
- ▶ **Bookmarks** to mark the site.
- ▶ **Mark Site** to create a bookmark for the current wireless Internet site.
- ▶ **About Openwave** to display information about the Openwave browser.
- ▶ **Advanced** to display advanced options for your Sprint PCS Wireless Web Browser. (You should only use when instructed by Sprint PCS Customer Care.)

Ending a Browser Session

To end a browser session and disconnect from the Sprint PCS Wireless Web, press .

Troubleshooting

If you're having trouble using the Sprint PCS Wireless Web Browser, use the following troubleshooting guide:

Problem: You can't escape from a particular site.

Recommendation: Go to the Sprint PCS Wireless Web Home Page by pressing and holding .

Problem: You continue to receive errors when using a certain site.

Recommendation: Try again later. Sites are sometimes temporarily inaccessible due to high traffic. If the problem persists, there may be a problem with the site.

Problem: The Browser appears to be malfunctioning or stops responding.

Recommendation: Reset the Browser by going to the Browser Menu and selecting the “Restart” option. If that doesn't work, turn your phone off then on again. If that also fails, try removing the battery and then replacing it.

If none of these solutions work, please contact Sprint PCS Customer Care.

Problem: An error message says the phone is not yet registered for Sprint PCS Wireless Web services.

Recommendation: Sprint PCS Wireless Web services can take longer to activate than voice services. Please try again later. If the problem persists for more than one day, please contact Sprint PCS Customer Care.

Problem: The message “Service Not Available” appears.

Recommendation: Your phone can't acquire a signal or you are in an area that does not yet support Sprint PCS Wireless Web services. If possible, try to find an area that supports Sprint PCS Wireless Web services. If you continue to receive this message, please contact Sprint PCS Customer Care.

Problem: The message “Data Server Unavailable” appears.

Recommendation: Sprint PCS Wireless Web services are temporarily unavailable for some reason. Please try again later. If this problem persists, please contact Sprint PCS Customer Care.

Problem: The message “IP Address Missing” appears.

Recommendation: Your phone's factory settings have been altered. Please contact Sprint PCS Customer Care for assistance.

My Sprint PCS Wireless Web

My Sprint PCS Wireless Web lets you manage your Wireless Web bookmarks and create a personalized menu of wireless Internet sites to give you control over your Internet experience. Simply log on to www.sprintpcs.com from your PC, click on the Manage section and locate your account profile. From there, you can build and modify your menu by selecting and arranging your favorite web sites into as many as 27 customized folders. When you launch the Sprint PCS Wireless Web on your Sprint PCS Phone, you will instantly see your personalized menu.

To customize and access My Sprint PCS Wireless Web:

1. Press  for **Main Menu**.
2. Press  for **Wireless Web**.
3. Press  for **Start Browser**.
4. If the Sprint PCS Wireless Web Home Page is not displayed, press .
5. Select **@SprintPCS** (or **AOL**), and press .
6. Select **Sprint PCS Mail**, and press . (If you are a first-time user, follow the prompts to set up your Sprint PCS Wireless Web account. A user name and password must also be established.)
7. To view your messages scroll to highlight **Inbox**, and press , (or scroll to highlight **Mail** from the America Online home page and press .
8. Select the message you wish to read, and press .
9. After you have read the message, you can select an action at the end of the message, such as **Erase, Reply, Reply All or Next Message**

Using Sprint PCS Wireless Web Mail

With Sprint PCS Wireless Web Mail, you can set up a Sprint PCS e-mail account at no additional charge and perform many of the typical e-mail functions from your Sprint PCS Phone that you can from your personal computer.

You can manage your Sprint PCS Wireless Web Mail account from your Sprint PCS Phone or personal computer at www.sprintpcs.com. You can also access other select e-mail providers, including America Online®, Yahoo!®, Juno®, MSN/Hotmail® and more.

To access Sprint PCS Wireless Web Mail:

1. Launch the Sprint PCS Wireless Web on your Sprint PCS Phone.
2. From the Sprint PCS Wireless Web Home Page, select the **Messaging** folder and press .
3. From the Messaging folder, select **Sprint PCS Mail** and press . If you're a first-time user, prompts will help you set up your Sprint PCS Wireless Web account by establishing a user name and password.
4. To view your messages, select **Inbox** with Sprint PCS Wireless Web Mail and press .
5. Scroll to select the message you wish to read and press .
6. Once you've read a message, use the quick actions and the end of each message (**Erase**, **Reply**, **Reply All** or **Next Message**) or select **Menu** for a full list of options.

To compose a Sprint PCS Wireless Web Message:

1. Launch the Sprint PCS Wireless Web on your Sprint PCS Phone.
2. From the Sprint PCS Wireless Web Home Page, select the **Messaging** and press .
3. From the Messaging folder, select **Sprint PCS Mail** and press .
4. Select **Compose** and press .
5. Select **Add Name** to enter the address of the person to whom you're sending a message and press .
6. Select **Next** to enter the subject of your e-mail and your specific message.
7. Select **Send** when your message is ready to be delivered.

Using AOL Instant Messenger Service

The AOL Instant Messenger Service lets you keep in touch with family and friends via two-way instant messaging. Simply type a message using your Sprint PCS Phone or personal computer, send it off to friends and family on your Buddy List[®] group, and they'll receive your message in an instant. Messages can be sent from Sprint PCS Phone to Sprint PCS Phone, personal computer to Sprint PCS Phone and Sprint PCS Phone to personal computer. When you receive a new message, you will be informed by a Sprint PCS Wireless Web Alert – even when you are not logged on to the Sprint PCS Wireless Web.

To sign up for AOL Instant Messenger service, visit the AOL Instant Messenger page from your personal computer at www.sprintpcs.com. Or visit www.aol.com and register for an AOL Instant Messenger screen name and password by downloading the software as instructed. You do not have to be an AOL member to utilize this service.

To access AOL Instant Messenger from your Sprint PCS Phone:

1. Press  for **Main Menu**.
2. Press  for **Wireless Web**.
3. Press  for **Start Browser**.
4. If the **Wireless Web** home page is not displayed, press .
5. Select **Messaging** or **AOL**, and press .
6. Select **AOL IM**, and press .
7. When the AOL **Instant Messenger** screen is displayed, press .
8. Enter your AOL Instant Messenger screen name and press . (Use the screen name you created when you signed up for the AOL Instant Messenger Service.)

Note: Remember, all the letters in your password must be lowercase.

9. Enter your password and press . The AOL Instant Messenger menu is displayed.

To send AOL Instant Messages:

1. Access the AOL Instant Messenger screen as outlined above and enter your screen name and password.
2. Select **Conversations**, **Online Buddies** or **Offline Buddies** and press .
3. Select the screen name of the person to whom you wish to send a message and press .
4. Enter your text message or Quick Reply and press .

To read AOL Instant Messages:

1. When you receive an AOL Instant Message, you will see  or “Message from AIM” on your display screen.
2. If “Message from AIM” displays, press  to go to the message location. If  displays, press  once to go to the **AOL Instant Messenger** area.
3. In the **Conversations** area, the screen name of the Buddy List member who sent you the instant message will be marked with an asterisk (*). Select the marked name and press . Your message will display.

Using Sprint PCS Wireless Web Short Mail

With Sprint PCS Wireless Web Short Mail, you can use a person’s Sprint PCS Phone Number to send instant text messages from your Internet-ready Sprint PCS Phone to their Internet-ready Sprint PCS Phone — and they can send messages to you. When you receive a new message, you’ll automatically be notified with a Sprint PCS Web Alert.

To send a Short Mail message:

1. Press  for **Main Menu**.
2. Press  for **Wireless Web**.
3. Press  for **Start Browser**.
4. If the **WIRELESS WEB** home page is not displayed, press .
5. Select **Messaging** and press .
6. Select **Short Mail** and press .
7. Select **Compose** and press .
8. Enter a Sprint PCS Phone Number and press .

9. Select **Type Msg** (to enter a message up to 100 characters), **Pre-Set Msgs** (to select a preset message) or **Icons** and press .
10. Enter your text, or select a preset message, or icon and press .
11. To send the message, and press .

To read a Short Mail message:

1. When you receive a Short Mail message, you will see  or “1 New Short Mail Message” on your display screen.
2. If “1 New Short Mail Message” displays, press  to go to the message location.

Note: If your phone does not receive Web Alerts, you cannot receive Short Mail Messages.

To reply to a Short Mail message:

1. While the message is open, scroll to **Reply** and press .
2. Select **Type Msg** (to enter a message up to 100 characters), **Pre-Set Msgs** (to select a preset message) or **Icons** and press .
3. Enter your text or select a preset message or icon and press .
4. To send the message, select the **SEND** softkey and press .

To add and/or edit pretyped messages:

1. Launch the Sprint PCS Wireless Web from your Sprint PCS Phone.
2. From the Sprint PCS Wireless Web Home Page, select the **Messaging** folder and press .
3. Select **Short Mail** and press .
4. Select **Menu** and press .
5. From the **Options Menu** highlight **Pre-Set Msgs** and press .
6. From the **Edit Pre-Set MS** menu, select **(Add New)** or the message you wish to edit and press .
7. Enter your new message or changes and press .

Signing up for Sprint PCS Wireless Web Updates

With Sprint PCS Wireless Web Updates, you can have the Internet-based information sent directly to your Sprint PCS Phone at the times you choose. When you select the Sprint PCS Wireless Web option, up to 50 updates can be sent to your phone each month at no additional charge.

To select the Internet-based information you want sent to your Sprint PCS Phone:

1. From your computer, log on to the Internet.
2. Go to the site from which you want to receive information. A few of the sites you can visit are America Online[®], amazon.com[®], eCompare![®], ebay[®], FoxSports.com[®] and FTD.com[®]. (The location where you request updates within each site will vary.)
3. Where indicated on the site, input your Sprint PCS 10-digit phone number followed by “@messaging.sprintpcs.com.” For example: 5551234567@messaging.sprintpcs.com.

Upon completing the registration process, you should begin receiving your updates on your Sprint PCS Phone as requested.

Games

In This Section

- ▶ **Push Push**
 - ▶ **Fly Ribbon**
 - ▶ **Spider Hunter**
-

By now you've discovered the great features that come with your phone. Now it's time to experience the fun of playing games on your phone.

Push Push

To open Push Push:

1. Press .
2. Press  for **Games**.
3. Press  for **Push Push**.
4. When the game's 'start screen' is displayed, press  to start.
5. A list of playing instructions is displayed.
6. Press  again to start the game.

Object

The object of the game is to push the balls into the little house. The ball can be pushed left, right, up, or down. It cannot however, be pushed backwards. There must always be a space to push the ball forward or else the ball is stuck and the level cannot be completed. Two balls cannot be pushed together, only one ball at a time may be pushed. Once the ball has been pushed into the house, another ball can push the house if another house is located behind it. You can go back one move by pressing .

Key Commands

The following options are displayed when available:

KEY HELPER: Displays each key's function.

-  - Move Up
-  - Move Down
-  - Move Left
-  - Move Right
-  - previous stage
-  - next stage
-  - restart stage
-  - Undo
-  - Exit

Fly Ribbon

To open Fly Ribbon:

1. Press .
2. Press  for **Games**.
3. Press  for **Fly Ribbon**.
4. Press  to start.
5. The playing instructions is displayed.
6. Press  again to start the game.

Object

The object of the game is to fly the ribbon through a maze of obstacles. The control the path of the ribbon, use the Navigation button. Move the flight path of the ribbon up or down to avoid the wall. The longer the distance, the faster the ribbon goes.

Spider Hunter

To open Spider Hunter:

1. Press .
2. Press  for **Games**.
3. Press  for **Spider Hunter**.
4. Press .
5. The playing instructions are displayed.
6. Select the level by pressing  for easy or  for hard.

Object

The object of the game is to drop the potted plants on the spiders from the top of the wall. Move back and forth using the Navigation key and drop the plants by pressing the  key. The spiders will attempt to reach the top of the wall. You start out with three hearts. If a spider reaches the top, you loose one heart. When you loose all three, the game is over. A high score is recorded each time you play.

Position Location

In This Section

- ▶ **Services**
 - ▶ **Settings**
-

With Position Location, the Sprint PCS Network can locate your position, provided you are in a Sprint PCS service area and location services are available. This feature can also be turned off (except during an emergency call) to ensure your privacy. For a stronger location signal, make sure the antenna is fully extended.

Services

This phone is designed to support location based services of the future.

Features include:

- ▶ Driving directions
- ▶ Traffic service
- ▶ Entertainment/services location
- ▶ 911 emergency location services
- ▶ Location of family/friends

Location services for 911 calls are not currently available. While these services are not available today (or) (are still under development), this leading-edge phone has the technology required to support such network based services upon their launch.

Settings

The settings allow you to turn the Position Location ON or OFF. If the option is turned OFF, the Sprint PCS Network cannot locate your position using the Position Location feature. This option is automatically turned ON when an emergency call is placed, then turned back OFF when the call is completed.

To turn Position Location ON or OFF:

1. Press  for **Main Menu**.
2. Press  for **Setup/Tool**.
3. Press  for **Location**.
4. Press  to continue.
5. Move the Navigation key left or right to select **On** or **Off**.
6. Press  to Save and exit.

Calculator

In This Section

- ▶ **Accessing the Calculator**
 - ▶ **Performing Simple Calculations**
-

Having a calculator handy is not only convenient, but practical. This easy to use calculator makes figuring out simple math equations a breeze.

Accessing the Calculator

The calculator allows you to perform basic mathematical calculations using your phone. Addition, subtraction, multiplication, and division can be performed.

To access the calculator:

1. Press  for **Main Menu**.
2. Press  for **Setup/Tool**.
3. Press  for **Calculator**.

Performing a simple Calculations

1. Press  for **Main Menu**.
2. Press  for **Setup/Tool**.
3. Press  for **Calculator**.
4. Using the keypad, enter the first number of the calculation.
5. Press the Navigation key up or down to scroll through the different mathematical signs.
6. When the desired sign is displayed, enter the second number of the calculation.
7. Press  to view the results.

Note: Perform steps 5 and 6 again to perform additional calculations.

Selecting Your Accessories

In This Section

- ▶ **Overview of Available Accessories for your Phone**
 - ▶ **How to Order**
-

We offer a variety of accessories for your new phone. Choose from chargers, batteries and hands-free devices — all designed to give you more flexibility and convenience.

Accessory Options

Standard Battery

The standard battery provides approximately up to 2.4 hours of continuous talk time in digital mode and up to 1.3 hours of continuous talk time in analog mode or up to 168 hours of continuous standby time in digital mode and up to 15 hours continuous standby time in analog mode. The battery charges in about 4 hours using any of the charging accessories available with this phone.

Vehicle Power Adapter

You can charge your phone (even during a call) in your vehicle.

Hands-Free Car Kit

Allows you to operate your phone hands-free so you can drive safely. It also charges the phone's battery.

Travel Charger

The Travel Charger uses an AC adapter and is provided with your phone for convenient charging.

Sprint PCS Wireless Web Connection Car Kit

This multi-device kit enables socket and/or PC card connection to the PCMCIA – simplifying the connection and expanding the number of available peripherals by freeing up the serial port for fax or printer use. This kit contains Sprint PCS Dialer software, a serial data cable and a cable adapter to connect your phone to your mobile computing device. The kit contains all the components necessary to connect laptop's, Windows CE devices and Macintosh portables.

Holster

The high-impact plastic Holster is designed specifically for your phone with a tailored fit. A spring loaded belt clip ensures protection and easy accessibility while carrying your handset.

Leather Case

Made from high quality leather, this case provides durability and convenience while using your phone.

How To Order

Most Sprint PCS Accessories found at local Sprint PCS Centers can also be purchased through the Sprint PCS Accessory HotlineSM by calling 1-800-974-ACC1 (2221) or  from your phone. Next day delivery is offered in select areas. You can also visit our web site at www.sprintpcs.com.

Knowing Performance and Safety Guidelines

In This Section

- ▶ **Getting the Most Out of Your Reception**
 - ▶ **Maintaining Safe Use and Access to Your Phone**
 - ▶ **Caring for the Battery**
 - ▶ **Acknowledging Special Precautions and the FCC Notice**
-

Part of getting the most out of your Sprint PCS® Phone is knowing where and how it works at optimum efficiency. This section outlines performance and safety guidelines that ensure you experience the full quality your Sprint PCS Phone was designed to give you.

Getting the Most Out of Your Reception

Keeping Tabs on Signal Strength

The quality of each call you make or receive depends on the signal strength in your area. Your phone informs you of the current strength by displaying a number of bars next to the signal strength icon. The more bars displayed, the stronger the signal. If you're inside a building, being near a window may give you better reception.

Understanding Power Save Feature

If your phone is unable to find a signal after 15 minutes of searching, a Power Save feature is automatically activated. If your phone is on, it periodically rechecks service availability or you can check yourself by pressing any key. Anytime the Power Save feature is activated, a message displays on the screen. When a signal is found, your phone returns to Standby mode.

Understanding How Your Phone Operates

Your phone is basically a radio transmitter and receiver. When it's turned on, it receives and transmits radio frequency (RF) signals. When you use your phone, the system handling your call controls the power level. This power can range from 0.006 watts to 0.2 watts in digital mode.

Knowing Radio Frequency Safety

The design of your Sprint PCS Phone complies with updated NCRP standards described below.

In 1991-92, the Institute of Electrical and Electronics Engineers (IEEE) and the American National Standards Institute (ANSI) joined in updating ANSI's 1982 standard for safety levels with respect to human exposure to RF signals. More than 120 scientists, engineers and physicians from universities, government health agencies and industries developed this updated standard after reviewing the available body of research. In 1993, the Federal Communications Commission (FCC) adopted this updated standard in a regulation. In August 1996, the FCC adopted hybrid standard consisting of the existing ANSI/IEEE standard and the guidelines published by the National Council of Radiation Protection and Measurements (NCRP).

Maintaining Your Phone's Peak Performance

There are several simple guidelines to operating your phone properly and maintaining safe, satisfactory service.

- ▶ Hold the phone with the antenna up, fully-extended and over your shoulder.
- ▶ Try not to ever hold, bend or twist the phone antenna.
- ▶ Don't use the phone if the antenna is damaged.
- ▶ Speak directly into the mouthpiece.

- ▶ Avoid exposing your phone and accessories to rain or liquid spills. If your phone does get wet, immediately turn the power off and remove the battery. If it's inoperable, return it to a Sprint PCS Center or call Sprint PCS Customer Care for service.

Note: For the best care of your phone, only Sprint PCS authorized personnel should service your phone and accessories. Faulty service may void the warranty.

Maintaining Safe Use of and Access to Your Phone

FAILURE TO FOLLOW THE INSTRUCTIONS OUTLINED MAY LEAD TO SERIOUS PERSONAL INJURY AND POSSIBLE PROPERTY DAMAGE

Using Your Phone While Driving

Talking on the phone while driving (or operating the phone without a hands-free device) is prohibited in some jurisdictions. Laws vary as to specific restrictions. Remember that safety always comes first.

When using your phone in the car:

- ▶ Get to know your phone and its features, such as speed dial and redial.
- ▶ When available, use a hands-free device.
- ▶ Position your phone within easy reach.
- ▶ Let the person you are speaking to know you are driving; if necessary, suspend the call in heavy traffic or hazardous weather conditions.
- ▶ Do not take notes or look up phone numbers while driving.
- ▶ Dial sensibly and assess the traffic; if possible, place calls when you are not moving or before pulling into traffic.
- ▶ Do not engage in stressful or emotional conversations that may divert your attention from the road.
- ▶ Dial     to report serious emergencies. It's free from your wireless phone.
- ▶ Use your phone to help others in emergencies.
- ▶ Call roadside assistance or a special non-emergency wireless number when necessary.

Tip: Purchase an optional Hands-Free Car Kit.

Following Safety Guidelines

To operate your phone safely and efficiently, always follow any special regulations in a given area. Turn your phone off in areas where use is forbidden or when it may cause interference or danger.

Using Your Phone Near Other Electronic Devices

Most modern electronic equipment is shielded from radio frequency (RF) signals. However, RF signals from wireless phones may affect inadequately shielded electronic equipment.

RF signals may affect improperly installed or inadequately shielded electronic operating and entertainment systems in motor vehicles. Check with the manufacturer or its representative to determine if these systems are adequately shielded from external RF signals. Also check with the manufacturer regarding any equipment that has been added to your vehicle.

Consult the manufacturer of any personal medical devices, such as pacemakers and hearing aids, to determine if they are adequately shielded from external RF signals.

Note: Always turn off the phone in health care facilities and request permission before using the phone near medical equipment.

Turning Off Your Phone Before Flying

Turn off your phone before boarding any aircraft. To prevent possible interference with aircraft systems, the U.S. Federal Aviation Administration (FAA) regulations require you to have permission from a crew member to use your phone while the plane is on the ground. To prevent any risk of interference, FCC regulations prohibit using your phone while the plane is in the air.

Turning Off Your Phone in Dangerous Areas

To avoid interfering with blasting operations, turn off your phone when in a blasting area or in other areas with signs indicating that two-way radios should be turned off. Construction crews often use remote-control RF devices to set off explosives.

Turn off your phone when you're in any area that has a potentially explosive atmosphere. Although it's rare, your phone or its accessories could generate sparks. Sparks could cause an explosion or a fire resulting in bodily injury or even death. These areas are often, but not always, clearly marked. They include:

- ▶ Fueling areas such as gas stations
- ▶ Below deck on boats
- ▶ Fuel or chemical transfer or storage facilities
- ▶ Areas where the air contains chemicals or particles such as grain, dust or metal powders
- ▶ Any other area where you would normally be advised to turn off your vehicle engine

Note: Never transport or store flammable gas, liquid or explosives in the compartment of your vehicle that contains your phone or accessories.

Restricting Children's Access to Your Phone

Your Sprint PCS Phone is not a toy. Children should not be allowed to play with it because they could hurt themselves and others, damage the phone or make calls that increase your phone bill.

Caring for the Battery

Protecting Your Battery

The guidelines listed below help you get the most out of your battery's performance.

- ▶ Use only Sprint PCS-approved batteries and desktop chargers. These chargers are designed to maximize battery life. Using other batteries or chargers voids your warranty and may cause damage.
- ▶ In order to avoid damage, charge the battery only in temperatures that range from 32° F to 113° F (0° C to 45° C).
- ▶ Don't use the battery charger in direct sunlight or in high humidity areas, such as the bathroom.
- ▶ Never dispose of the battery by incineration.
- ▶ Keep the metal contacts on top of the battery clean.
- ▶ Don't attempt to disassemble or short-circuit the battery.
- ▶ The battery may need recharging if it has not been used for a long period of time.
- ▶ It's best to replace the battery when it no longer provides acceptable performance. It can be recharged hundreds of times before it needs replacing.
- ▶ Don't store the battery in high temperature areas for long periods of time. It's best to follow these storage rules:

Less than one month: 4° F to 140° F (-20° C to 60° C)

More than one month: 4° F to 113° F (-20° C to 45° C)

Disposal of Lithium Ion (LiIon) Batteries

For safe disposal options of your LiIon batteries, contact your nearest Sprint PCS-authorized service center.

Special note: Be sure to dispose of your battery properly. In some areas, the disposal of batteries in household or business trash may be prohibited.

Note: For safety, do not handle a damaged or leaking LiIon battery.

Acknowledging Special Precautions and the FCC Notice

FCC Notice

The phone may cause TV or radio interference if used in close proximity to receiving equipment. The FCC can require you to stop using the phone if such interference cannot be eliminated.

Vehicles using liquefied petroleum gas (such as propane or butane) must comply with the National Fire Protection Standard (NFPA-58). For a copy of this standard, contact the National Fire Protection Association, One Batterymarch Park, Quincy, MA 02269, Attn: Publication Sales Division.

Cautions

Any changes or modifications to your phone not expressly approved in this document could void your warranty for this equipment and void your authority to operate this equipment. Only use approved batteries, antennas and chargers. The use of any unauthorized accessories may be dangerous and voids the phone warranty if said accessories cause damage or a defect to the phone.

Although your phone is quite sturdy, it is a complex piece of equipment and can be broken. Avoid dropping, hitting, bending or sitting on it.

Body-Worn Operation

To maintain compliance with FCC RF exposure guidelines, if you wear a handset on your body, use the Sprint PCS supplied or approved carrying case, holster or other body-worn accessory. If you do not use a body-worn accessory, ensure the antenna is at least one inch (2.5 centimeters) from your body when transmitting. Use of non-Sprint PCS approved accessories may violate FCC RF exposure guidelines.

For more information about RF exposure, please visit the FCC website at www.fcc.gov.

Specific Absorption Rate (SAR) for Wireless Phones

The SAR is a value that corresponds to the relative amount of RF energy absorbed in the head of a user of a wireless handset.

The SAR value of a phone is the result of an extensive testing, measuring and calculation process. It does not represent how much RF the phone emits. All phone models are tested at their highest value in strict laboratory settings. But when in operation, the SAR of a phone can be substantially less than the level reported to the FCC. This is because of a variety of factors including its proximity to a base station antenna, phone design and other factors. What is important to remember is that each phone meets strict federal guidelines. Variations in SARs do not represent a variation in safety.

All phones must meet the federal standard, which incorporates a substantial margin of safety. As stated above, variations in SAR values between different model phones do not mean variations in safety. SAR values at or below the federal standard of 1.6 W/kg are considered safe for use by the public.

FCC Radio Frequency Emission

This phone meets the FCC Radio Frequency Emission Guidelines. FCC ID number: **A3LSPHA460**. More information on the phone's SAR can be found from the following FCC website: <http://www.fcc.gov/oet/fccid>

Owner's Record

The model number, regulatory number and serial number are located on a nameplate inside the battery compartment. Record the serial number in the space provided below. This will be helpful if you need to contact us about your phone in the future.

Model:

Serial No.:

User Guide Proprietary Notice

CDMA Technology is licensed by QUALCOMM Incorporated under one or more of the following patents:

4,901,307	5,109,390	5,267,262	5,416,797
5,506,865	5,544,196	5,657,420	5,101,501
5,267,261	5,414,796	5,504,773	5,535,239
5,600,754	5,778,338	5,228,054	5,337,338
5,710,784	5,056,109	5,568,483	5,659,569
5,490,165	5,511,073		

T9 Text Input is licensed by Tegic Communications and is covered by U.S. Pat. 5,818,437, U.S. Pat. 5,953,541, U.S. Pat. 6,011,554 and other patents pending.

Terms and Conditions & Warranty Information

In This Section

- ▶ **Terms and Conditions of Services**
 - ▶ **Manufacturer's Warranty**
-

This section contains the Terms and Conditions of Services and the manufacturer's warranty for your Sprint PCS® Phone.

Terms and Conditions

Terms and Conditions of Services

(Effective as of November 24, 2003 until replaced)

Thanks for choosing Sprint. These terms and conditions are part of your agreement with Sprint for PCS Services.

The terms and conditions included with your PCS Phone may not be the most current version. For the most current version of the terms and conditions, please visit our website at www.sprintpcs.com or call PCS Customer Service Solutions at 1-888-211-4PCS. If you activated PCS Services before the effective date of these terms and conditions, these terms and conditions replace and supersede any previous terms and conditions.

If you have questions about your PCS Services, please visit our website at www.sprintpcs.com or call PCS Customer Service Solutions at 1-888-211-4PCS (4727).

Para solicitar esta literatura en español, por favor contactar a 1-888-211-4PCS(4727).

Agreement. Your agreement ("Agreement") with Sprint Spectrum L.P. and any of its affiliates doing business as Sprint providing PCS Services ("Services") to you is made up of these Terms and Conditions of Service ("Terms") and the Service Plan that we agree to provide you. Your "Service Plan" is described in our marketing materials, and includes the terms, rates and features we set for that Service Plan. In the agreement, we use the words "we," "us," "our" or "Sprint" to refer to Sprint Spectrum L.P. and its affiliates doing business as Sprint. You accept the agreement when you activate PCS Services or make any attempt to use our PCS Services (for example, attempting to place any call while on or roaming off the Sprint Nationwide PCS Network, using data services, etc.). We may change the Agreement at any time by giving you prior notice. Any changes to the Agreement are effective when we publish them. If you use our Services or make any payment to us on or after the effective date of the changes, you accept the changes. If we change a material term of the Agreement and that change has a material adverse effect on you, you may terminate the Agreement without an early termination fee by calling 1-888-211-4727 within 30 days after the invoice date of the first invoice your receive after the changes go into effect. You understand and agree that taxes, Universal Service fees and other charges imposed by the government or based on government calculations may increase or decrease on a monthly basis, and that this paragraph does not apply to any increases in such taxes, Universal Service fees and other charges.

Provision of Service. Your purchase of a PCS Phone or other equipment does not mean that we must provide Services to you. We may decide not to provide Services to you for any lawful reason. We may request that you provide us with any information we reasonably require to determine whether you qualify for Services. Services in some areas are managed and provided under contract with Sprint by independent affiliates with access to the Sprint Nationwide PCS Network. Some

Services may not be available or may operate differently in certain affiliate markets or other areas.

Credit Verification. You must have and maintain satisfactory credit to receive and continue to receive Services. We will verify your credit before agreeing to provide Services to you and we may verify your credit at any time while we provide Services to you. Credit verification may include a review of credit reports that we receive from credit bureaus. If at any time we determine, in our sole discretion, that payment for Services may not be made when due, we may suspend Services and require that you provide payment on account or a guarantee of payment before we resume Services.

Service Plan. You may be eligible for a fixed length PCS Service Plan ("Term Service Plan") or for a month-to-month Service Plan ("Non-Term Service Plan"). We determine the Service Plan for which you qualify. Except as permitted by the Agreement, you must maintain service with us on your Term Service Plan for the minimum term associated with that Term Service Plan. We may offer non-identical Service Plans to different individuals or entities. Services and coverage under some Service Plans may be more limited than available under other Service Plans. Your Service Plan sets out the charges for Services and is your Service Plan until that Service Plan is changed, you switch to a different Service Plan, or your Services terminate. Based on your credit rating or other factors, we may require that you make a deposit, prepayment, or a series of deposits or prepayments, or be subject to an account spending limit, before Services are activated or maintained.

Changing Service Plans. If you are on a Non-Term Service Plan, you may change to a different Service Plan for which you qualify. Any change is effective at the start of your next full invoicing cycle unless otherwise specified by us at the time that you place your change order. If you change or add a different Service Plan or service feature and the change is effective prior to the start of your next full invoicing cycle, you will be invoiced a prorated amount. We may require a service charge for implementing any change directed by you in addition to the charges associated with the Service Plan or optional service features you select. If you are on a Term Service Plan and you want to change your service plan, you may be required to accept a new Term Service Plan and we may require you to pay the early termination fee set out in your Service Plan or other fee.

Termination. Non-Term Service Plan. If you are on a Non-Term Service Plan, you may terminate Services at any time by giving us notice. Subject to the terms of this Agreement, we may terminate Services at any time, with or without notice. If your Service has been suspended due to non-payment, you may be charged a reactivation fee. We may deactivate any Number before you receive notice of termination without liability to you. Termination by either of us may be with or without cause.

Termination. Term Service Plan. EXCEPT AS PERMITTED BY THE AGREEMENT, IF YOU TERMINATE YOUR TERM SERVICE PLAN BEFORE THE END OF THE TERM, OR IF WE TERMINATE SERVICES FOR CAUSE BEFORE THE END OF THE TERM, YOU WILL BE REQUIRED TO PAY THE EARLY TERMINATION FEE ASSOCIATED WITH YOUR TERM SERVICE PLAN. No early termination fee is charged if you

terminate a Term Service Plan in accordance with the return policy associated with your Term Service Plan. After the expiration of the term, the Terms relating to Non-Term Service Plans apply.

Termination. General. Regardless of whether you have a Non-Term or a Term Service Plan, we may terminate or suspend Services to you without liability if: (1) you breach any provision of this Agreement (including if you fail to pay any charges for Services); or (2) you fail to pay any charges due us for equipment or otherwise. If Services are terminated before the end of your current invoicing cycle, we will not prorate the monthly recurring charge to the date of termination, and you will not receive a credit or refund for any unused minutes in your Service Plan.

Use of Services and Equipment; Availability. You must be at least 18 years old to subscribe to our Services. We may require you to provide proof of your age and identity. If you are under 18 years old you may be eligible for certain Services that have Account Spending Limits if a person 18 years or older is also named as a subscriber on the Account. Your PCS Phone will not accept the services of any wireless provider other than Sprint (but see Roaming). Services and equipment may not be used for any unlawful, fraudulent or abusive purpose. By requesting Services, you agree that you will not use Services and equipment in any unlawful, fraudulent or abusive manner. You may not resell or lease Services or equipment to anyone.

Coverage. Most services are only available within the operating range of the Sprint Nationwide PCS Network (also see Roaming). Coverage is not available everywhere. Coverage and quality of Services may be affected by conditions within or beyond our control, including network problems, signal strength, your equipment, and atmospheric, geographic, or topographic conditions. We do not guarantee service availability or that there will be no interruptions or delays in Services (e.g., dropped calls, blocked calls, etc.).

Number. We may change the phone number ("Number") assigned to your PCS device without compensation by giving you prior notice. You do not own the Number. You may not modify the Number we program into any phone or other equipment, duplicate the Number to any device other than that authorized by us or, except as allowed for by law, transfer (port) the Number to any other individual or entity. If you transfer the Number to another carrier, the terms of the Agreement (including the rights and obligations set forth in the Termination paragraphs) still apply. In certain instances, you may transfer a Number from another carrier to Sprint. Sprint does not in any way guarantee that such transfers to (or from) Sprint will be successful. If a transfer to Sprint is not successful, you will be responsible any discounts provided to you with the purchase of your PCS device. See our printed in-store materials or visit www.sprintpcs.com for additional important information on Number transfers.

Phone Activation Fee. You may be required to pay a non-refundable phone activation fee when you activate a new Number, have us switch a Number to a different phone, have your current Number changed, we activate a different phone on your existing account or your Service Plan says so.

Charges. For most forms of wireless Service, your usage will be charged from the time you first initiate contact between your phone or other wireless device and the network until the network connection is broken, whether or not you are successful in connecting with the service with which you seek to connect, even if the connection is later broken or dropped. An exception is that you are not charged for voice calls that are not completed. You are charged for completed calls to your Number from the time shortly before the phone starts ringing until the call is terminated. You will be charged peak rates for the entire duration of calls initiated during the peak time periods applicable to your Service. You will be charged off-peak rates for the entire duration of calls initiated during the off-peak time periods applicable to your Service. In addition to these usage charges, you may be charged for recurring monthly service charges, applicable local and long-distance toll charges, other usage charges, (including voicemail access, call waiting, call forwarding, etc.), connection fees, roaming charges, directory assistance, call completion charges, account review and management charges, optional features you select at an extra cost, surcharges related to government programs, and taxes. Charges for most Services are incurred in one-minute increments, with partial minutes of use rounded up to the next highest minute. You must pay, by each invoice due date, all charges for Services provided to the Number for each phone or other equipment that our records show you activated, no matter who actually uses or has possession of the phone or other equipment at the time Services are provided.

PCS Vision (Third Generation) Wireless Charges. For PCS Vision wireless services, you will be charged on a per kilobyte basis for data used, rather than for airtime used. As long as your PCS Vision device is connected to the Sprint Nationwide PCS Network ("PCS Vision network"), you will be incurring data usage charges. You are responsible for all data activity from and directed to your PCS Phone, regardless of who initiates the activity. We will invoice you for all data directed to the internet address (or "IP address") assigned to your device in a given PCS Vision session, regardless of whether your device actually receives the data. You will be charged for data usage initiated by others as well as those you initiate. You will be charged for additional data used in transporting and routing on the network. You will be charged for partial and interrupted data downloads or other use, including re-sent data, and for unsuccessful attempts to reach websites and use other applications and services, including those resulting from dropped network connections. If you use a Premium Service (including services provided by third parties but for which you are billed on your PCS Invoice), you will be charged for data used in transport and routing in addition to the charge for the Premium Service. The amount of data used and charged to you will vary widely, depending upon the specific PCS Vision wireless application or other service you use, the amount of data used in the specific application or service, and network congestion and other matters. For this and other reasons, estimates of data usage - for example, the size of downloadable files - will vary from what you actually use. You cannot receive incoming calls while using third generation services. Data usage will be rounded up to the next whole kilobyte. Kilobyte usage will be rounded up to the next full cent. Rounding up will occur at the end of each separate session or each clock hour (at the top of

each hour), if the session spans more than 1 clock hour. When traveling on our PCS Vision network, a session may be ended and new session initiated, although no interruption to the actual data session will occur. Your invoice will not separately identify the number of kilobytes attributable to your use of specific sites, sessions or services used.

PCS Vision Premium Services. Your PCS Vision wireless services may allow you to access or download premium content for an additional charge. Certain PCS Vision services (e.g., games, ringers and screen savers) primarily contain premium services content. Access to and downloading of premium content is not included with PCS Vision services. The additional charges for this premium content will be billed to you on your PCS Invoice. You will be charged for this content (at rates and charges specified at the time of access or download) that will be in addition to data usage charges you will incur while connected to the enhanced PCS Vision network. We provide no warranties and make no representations or claims with regard to third-party Premium Services. In certain instances, subject to the terms of the content purchased, we may delete premium and non-premium items downloaded to available storage areas (e.g., your vault), including any pictures, games and other content. We may limit the amount of Premium Services you may purchase in a specific timeframe (month, week, day, or other time period). We may suspend your use of Premium Services without prior consent or notice if we have reason to suspect fraudulent or unauthorized use of your Premium Services account, but we make no assurances that we will suspend your account.

Other Terms Applicable to PCS Vision Usage. Use of PCS Vision wireless services requires the purchase of a separate third generation wireless compatible phone or other device and is subject to any software, memory, storage or other limitation in the phone or other equipment. Not all applications and services work, or work the same, on all third generation wireless phones and devices. Check the materials accompanying your phone or device to determine which applications and services it will support. PCS Vision wireless services are not available while off the PCS Vision network. PCS Vision services are not available for server devices or host computer applications, other systems that drive continuous heavy traffic or data sessions, or as substitutes for private lines or frame relay connections. Unlimited PCS Vision plans/options are only available with phones or PCS smart phones where the device is not being used as a modem in connection with other equipment (e.g., computers, PDAs, etc.) through use of connection kits or other phone-to-computer/PDA accessories, or Bluetooth or other wireless technology. Sprint reserves the right to deny or to terminate service without notice for any misuse. Sprint is not responsible for any opinions, advice, statements, services applications or other information provided by third parties and accessible through PCS Vision wireless services. Neither Sprint nor its vendors or licensors guarantees the accuracy, completeness or usefulness of information that is obtained through the PCS Vision wireless services. You are responsible for evaluating such content. Use of certain PCS Vision wireless services, including some messaging services, may result in the disclosure to others of your email address and other information about you in connection with your internet usage. Your accessing of, or use of, third party sites or services accessible PCS Vision wireless services may require the

disclosure of information about you, subject to the policies of those sites and services. You consent to receiving advertising, warnings, alerts and other messages, including broadcast messages. Your access to PCS Vision wireless services is controlled by a password.

Voice Command. PCS Voice Command is an optional service that allows you to place calls by using speech recognition technology. Calls to 911 or similar emergency numbers cannot be placed through the Voice Command feature. Airtime and applicable long distance charges for a call completed from your Number using the Voice Command feature begin when you press or activate the TALK or similar key(s) and end when your call is terminated by hitting the END key or by returning to the Voice Command platform. If you initiate and complete another call without leaving the Voice Command platform, a separate charge for that call will begin from the time the previous call was terminated. Airtime and applicable long distance charges will be applied to the entire length of a completed call initiated from Voice Command. Using Directory Assistance to input names into your Voice Command address book will incur additional charges.

Invoicing. Invoicing cycles are approximately 30 days in length. Invoicing cycles and dates may change from time to time. Except as otherwise provided in your Service Plan, monthly recurring charges (MRCs) are invoiced one invoicing cycle in advance. Charges for Services are usually invoiced as soon as possible after the charges accrue. We may, however, invoice you for usage and charges occurring before the invoicing cycle being invoiced, if they were not previously invoiced. If you are invoiced for usage incurred during a prior invoicing cycle, those minutes will be applied to your Service Plan minutes for the current invoicing cycle. However, if you change your PCS Service Plan between the time the usage was incurred and the beginning of the current invoicing cycle, those minutes from the prior invoicing cycle will be charged at the rate per minute for usage over included minutes provided in the Service Plan in effect at the time the usage was incurred.

Payment. If you have authorized payment for Services or equipment by credit card or by debiting a bank account, no additional notice or consent is required before we invoice the credit card or debit the bank account for all amounts due to us or billed by us on behalf of a third party. You must promptly notify us of any change in your invoicing address or of the credit card or bank account used for payment. We reserve the right to require payment by money order, cashier's check or other secured form of payment. If we take action to receive payment beyond invoicing you for charges for Services or equipment, you must pay our costs and expenses of collection, including attorneys' fees and expenses, the fees of any collection agency and court costs. If we act as an invoicing agent for a third-party service provider, payments received are first applied to amounts due and owing to us and any remaining amounts are applied to sums due and owing to the third-party service provider. We may immediately charge an additional fee for any check or other negotiable instrument endorsed by you and returned unpaid by a financial institution for any reason. You may be charged fees for certain methods of payment.

Late Payment Charges. Payment is past due if we do not receive it by the due date shown on your invoice. Any payment for Services and equipment not made when due accrues late charges until paid at the rate of 5% per month or at the highest rate allowed by law. Acceptance of late or partial payments (even if marked "paid in full") does not waive our right to collect all amounts that you owe us. If your Service has been suspended due to non-payment, you may be charged a reactivation fee.

Disputed Charges. You must raise any dispute that you have about any charges invoiced to you within 15 days of the date of the invoice or you have accepted the invoice. You may notify us of any dispute by notifying PCS Customer Service Solutions. Calls to our sales or general business offices are not notice of a dispute. If disputed invoice procedures are described on the invoice, you must follow them.

Account Spending Limit. If we agree to provide Services to you on an Account Spending Limit basis, we will tell you your Account Spending Limit before we start Services to your Number, or as reasonably practicable after the limit is imposed. If we require a deposit for you to establish or keep Services on an Account Spending Limit basis, we will hold the deposit as partial guarantee of payment for Services (see Deposits). Charges for Services accrue against your Account Spending Limit as they are incurred. We may charge an initial ASL start up fee. We may charge a monthly ASL service fee, in addition to your recurring monthly service charge. We may suspend Services to your Number without prior notice to you when your account balance reaches your Account Spending Limit. Services are restored when you have paid any past due balance and pay a specified minimum amount to reduce your account balance below your Account Spending Limit. We may change this minimum amount at any time upon notice to you. You may pay any past due balance and the minimum amount by any method authorized by Sprint. Contact PCS Customer Service Solutions for information about authorized methods of making these payments. We may charge you a fee for calls that involve our live customer care services. If we provide Services to you on an Account Spending Limit basis, Services and coverage may be limited in certain ways. You must pay all charges for Services even if they exceed the amount of your Account Spending Limit.

Clear Pay. If we agree to provide Services to you as a Clear Pay customer, we may suspend Services to your Number without prior notice to you immediately when your bill becomes past due. Even if your bill is not past due, we may suspend services if your unpaid usage exceeds \$125 or another amount to be determined by your past credit or usage history. If we require a deposit for you to establish or keep Services as a Clear Pay customer, we will hold the deposit as partial guarantee of payment for Services (see Deposits, below). Contact PCS Customer Service Solutions for information about authorized methods of making these payments. We may charge you a fee for calls that involve our live customer care services. If we provide Services to you on as a Clear Pay basis, Services and coverage may be limited in certain ways. You must pay all charges for Services whether or not your Services are suspended or terminated.

Deposits. If we require a deposit for you to establish or keep Services, we will hold the deposit as partial guarantee of payment for Services. We may change the deposit amount at any time to reflect revised estimated monthly charges based upon your usage. A deposit may not be used to pay any invoice (unless it is used to pay a final invoice) or delay payment. The deposit amount, the length of time we hold the deposit and changes to the deposit amount are determined based on your credit and payment history. The rate of interest, if any, on the deposit is subject to change. We may mix deposits with our other funds. If Services are terminated for any reason, we may, without notice to you, apply your deposit toward payment of outstanding charges and return any excess to you at your last known address within 75 days after termination of Services. If the U.S. Postal Service cannot deliver the money to you and returns it to us, we will hold it for you for one year from the date of return and, during that period, we may charge a servicing fee against the deposit balance. Any money held during this one-year period will not accrue interest for your benefit. You forfeit any portion of the money left after the one-year period.

Wireless Web and Voice Portal Services. Wireless Web Services are part of the Services that can be obtained through Sprint. Wireless Web Services are not available in all markets or while roaming off the Sprint Nationwide PCS Network. Use of Wireless Web Services requires an Internet-ready PCS Phone or certain other equipment (or both) and is subject to any memory, storage or other limitation in the phone or other equipment. Wireless Web Services are not available on PCS Vision phones or devices. The Caller ID blocking feature is not available when using Wireless Web Services. Any use of Wireless Web Services deducts from your Service Plan minutes. For data calls (including Wireless Web and Voice Portal calls) that are attempted, but not completed, you are charged for the time during which the network attempts to connect the call. You are charged for time spent connected to the Wireless Web or Voice Portal, including time spent browsing on the Internet or Voice Portal and reviewing or scrolling through Internet information on-line while still connected to the Sprint Nationwide PCS Network. Not all Internet sites can be accessed and you may receive an error message if you attempt to access a site that cannot be accessed through Wireless Web Services. You are also charged for Wireless Web connections to review your PCS account information. Wireless Web Services are not available with all Service Plans. Sprint is not responsible for any opinions, advice, statements, services or other information provided by third-parties and accessible through Wireless Web Services or Voice Portal Services. Neither Sprint nor its vendors or licensors guarantees the accuracy, completeness or usefulness of information that is obtained through the Wireless Web Services or Voice Portal Services. You are responsible for evaluating such content.

Taxes and Surcharges. We invoice you for taxes, fees and other charges levied by or remitted directly to federal, state or local authorities, or foreign government on Services including, without limitation, sales, gross receipts, use, and excise taxes. If you claim any tax exemption, you must provide us with a valid tax-exempt document. Any tax exemption applies only from the date we receive a valid tax-exempt document. We also invoice you for fees that we collect and remit to the government such as Universal Service, and for surcharges that we collect and keep to pay for the costs of complying with government mandates such as number pooling and portability, and Enhanced 911 service. These charges are neither taxes nor government imposed assessments.

Roaming. Calls made while off the Sprint Nationwide PCS Network are "roaming" calls. Your PCS Phone is specifically designed and engineered to work only on the Sprint Nationwide PCS Network. It works on another CDMA PCS provider's system only when a roaming agreement is in place between Sprint and the other providers. If your PCS Phone is a dual-mode phone, it works on both a CDMA PCS provider's system (in addition to the Sprint Nationwide PCS Network) and a wireless analog telecommunications provider's system only when roaming agreements are in place between Sprint and the other providers. If we do not have a roaming agreement in place, you may be able to place roaming calls "manually" by using a valid credit card. If there is a gap or other interruption of coverage within a PCS coverage area that prevents connection with the Sprint Nationwide PCS Network and your dual-band phone is set to roam automatically when outside PCS coverage, you may incur roaming fees within a PCS coverage area. Certain features and services may not be available when roaming (including PCS Vision, voicemail, call waiting, call forwarding, etc.).

Phones and Other Equipment. Phones and other equipment may be purchased and returned as provided in the purchase documents. We are not the manufacturer of the phones or other equipment. The only warranties on the phones or other equipment are any limited warranties extended by the manufacturers. We have no liability in connection with the phones and other equipment or for the manufacturers' acts or omissions.

Lost or Stolen Equipment. If your phone or other equipment is lost or stolen, you must notify us by calling PCS Customer Service Solutions. You are responsible for all charges for Services provided to the Number for the lost or stolen equipment before you notify us of the loss or theft. We will deactivate Services to the Number upon notification to us of any loss or theft. You may be required to provide evidence of the loss or theft (for example, a police report or sworn statement). If the equipment is later found, we may require that you exchange it for another phone or other equipment before we reactivate Services (if we do reactivate Services), as well as require you to pay a reactivation fee. We will deactivate Services to any Number without prior notice to you if we suspect any unlawful or fraudulent use of the Number. You agree to cooperate reasonably with us in investigating suspected unlawful or fraudulent use.

Messages. You will incur airtime usage charges when accessing your voicemail from your PCS Phone. You may also incur charges in accessing text messages from your PCS Phone. You may access your voicemail without incurring airtime usage charges by checking your voicemail from a wireline phone. We may impose limits on the number of voicemail or text message that can be retained through your PCS account. Audible or visual indicators of text or voicemail messages, including mailbox icons on your PCS Phone, may not always provide an up to date indication of new messages. In certain instances, you may be required to manually reset or clear your mailbox indicator.

Caller ID. If you do not want people you call to receive the Number assigned to your phone, you must call PCS Customer Service Solutions for information about automatic Caller ID blocking. The Number assigned to your phone can be blocked on a per-call basis by dialing *67 + Destination Number + TALK (or similar key), but Caller ID delivery resumes on the next call you make. Caller ID display on incoming calls to your Number depends on receiving the information from the calling party.

TTY Access. A TTY (also known as TDD or Text Telephone) is a telecommunications device that allows people who are deaf or hard of hearing, or who have speech or language disabilities, to communicate by telephone. TTY doesn't work with all PCS Phones. If you have a PCS TTY-capable phone, it may not function effectively, or at all, when attempting 911 calls due to the equipment or software of the answering agency. Therefore, a TTY device should not be relied on for 911 calls.

Pay-Per-Call Service. We will not complete calls from your Number to 900, 976 and similar numbers for pay-per-call services.

International Calling. You may be limited in the international destinations that you can call with Services. You should contact PCS Customer Service Solutions for information about international destinations that you cannot call.

Limitation of Liability. Except as otherwise provided in this section, our sole liability to you for any loss or damage arising out of providing or failing to provide Services (including mistakes, omissions, interruptions, delays, errors, or defects) does not exceed (1) in cases related to a specific piece of equipment, the prorated MRC for Services to the piece of equipment during the affected period, or (2) in cases not related to a specific piece of equipment, the prorated MRCs for Services to you during the affected period. Neither we nor our vendors, suppliers or licensors are liable for any damage arising out of or in connection with:

- a) any act or omission of any telecommunications service or other service provider other than us;
- b) any directory listing;
- c) any dropped calls or inability to place or receive calls;
- d) any interruption of Services, including interruptions caused by equipment or facilities failure or shortages, transmission limitations or system capacity limitations;

e) traffic or other accidents, or any health-related claims allegedly arising from the use of Services, phones, equipment or accessories used in connection with the Services;

f) the use of Wireless Web Services and PCS Vision applications and services, including the accuracy or reliability of any information obtained from the Internet using Wireless Web Services or from Voice Portal Services, PCS Vision wireless services or Internet services, content or applications not supported by Sprint PCS;

g) any late or failed message delivery;

h) any interruption or failure of 911 or E911 emergency services or identification of the Number, address or name associated with any person accessing or attempting to access emergency services from your phone;

i) the installation or repair of any products or equipment by parties who are not our authorized employees or agents;

j) events due to factors beyond our control, including acts of God (including, without limitation, weather-related phenomena, fire or earthquake), war, riot, strike, or orders of governmental authority;

k) any act or omission of any third party or independent contractor that offers products or services in conjunction with or through the Services; or

l) your negligent or intentional act or omission.

NO CONSEQUENTIAL OR OTHER DAMAGES. UNDER NO CIRCUMSTANCES ARE WE LIABLE FOR ANY INCIDENTAL, CONSEQUENTIAL, PUNITIVE OR SPECIAL DAMAGES OF ANY NATURE WHATSOEVER ARISING OUT OF OR IN CONNECTION WITH PROVIDING OR FAILING TO PROVIDE SERVICES, PHONES OR OTHER EQUIPMENT USED IN CONNECTION WITH THE SERVICES, INCLUDING, WITHOUT LIMITATION, LOST PROFITS, LOSS OF BUSINESS, OR COST OF REPLACEMENT PRODUCTS AND SERVICES. THIS SECTION SURVIVES TERMINATION OF THIS AGREEMENT.

Indemnification. You indemnify and defend us, our partners, directors, officers, employees and agents from and against any claim, action, damage, liability and expense arising out of or in connection with: (1) your acts or omissions that occur in connection with your use of the Services or equipment used in connection with the Services, and (2) any communications you make or receive using the Services. This indemnification extends to and includes any attorney's fees and costs incurred by us arising from any actions or claims to which this indemnification applies, or from the contesting of the applicability of this provision. This section survives termination of this Agreement.

MANDATORY ARBITRATION OF DISPUTES. ANY CLAIM, CONTROVERSY OR DISPUTE OF ANY KIND BETWEEN THE CUSTOMER AND THE COMPANY AND/OR ANY OF ITS EMPLOYEES, AGENTS, AFFILIATES OR OTHER REPRESENTATIVES, WHETHER SOUNDING IN CONTRACT, STATUTE, OR TORT, INCLUDING FRAUD, MISREPRESENTATION, FRAUDULENT INDUCEMENT, OR ANY OTHER LEGAL OR EQUITABLE THEORY AND REGARDLESS OF THE DATE OF ACCRUAL OF SUCH CLAIM, CONTROVERSY OR DISPUTE SHALL BE RESOLVED BY FINAL AND BINDING ARBITRATION AS PRESCRIBED IN THIS SECTION. THE FEDERAL ARBITRATION ACT, NOT STATE LAW, GOVERNS THE QUESTION OF WHETHER A CLAIM IS SUBJECT TO ARBITRATION. HOWEVER, NOTHING CONTAINED IN THIS ARBITRATION PROVISION SHALL PRECLUDE THE CUSTOMER FROM RESOLVING ANY CLAIM, CONTROVERSY OR DISPUTE IN SMALL CLAIMS COURT HE OR SHE OTHERWISE WOULD HAVE THE RIGHT TO PURSUE.

A single arbitrator engaged in the practice of law will conduct the arbitration. The arbitrator will be selected according to the rules of CPR or, alternatively, may be selected by agreement of the parties, who shall cooperate in good faith to select the arbitrator. The arbitration will be conducted by, and under the then-applicable rules of the CPR Institute for Dispute Resolution. All expedited procedures prescribed by the applicable rules will apply. Any required hearing fees and costs shall be paid by the parties as required by the applicable rules or as required by applicable law, but the arbitrator shall have the power to apportion such costs as the arbitrator deems appropriate. The arbitrator's decision and award will be final and binding (subject to the appeal clause below), and judgment on the award rendered by the arbitrator may be entered in any court with jurisdiction.

An appeal may be taken under the CPR Arbitration Appeal Procedure from any final award of any arbitral panel in any arbitration arising out of or related to this agreement that is conducted in accordance with the requirements of such Appeal Procedure. Unless otherwise agreed by the parties and the appeal tribunal, the appeal shall be conducted at the place of the original arbitration.

If any party files a judicial or administrative action asserting a claim that is subject to arbitration and another party successfully stays such action or compels arbitration, the party filing that action must pay the other party's costs and expenses incurred in seeking such stay or compelling arbitration, including attorney's fees.

Notices. You may get our current address for written notice by calling PCS Customer Service Solutions. Written notice to you is sent to your last known address in our invoicing records. Written notice is effective three days after deposit in the U.S. mail, postage prepaid, and properly addressed. Unless required by this Agreement or Applicable Laws, (1) you may notify us by calling PCS Customer Service Solutions, and (2) we may notify you by leaving a message for you on your PCS Phone, answering machine or with your answering service. Notice addresses may be changed by giving notice as provided in this section.

Choice of Law; Jurisdiction. This Agreement is governed by and must be construed under federal law and the laws of the State of Kansas, without regard to choice of law principles.

General. If either of us does not enforce any right or remedy available under this Agreement, that failure is not a waiver of the right or remedy for any other breach or failure by the other party. Our waiver of any requirement in any one instance is not a general waiver of that requirement and does not amend this Agreement. This Agreement is subject to any applicable federal and state law (collectively, "Applicable Laws"). If any part of this Agreement is held invalid or unenforceable, that part is interpreted consistent with Applicable Laws as nearly as possible to reflect the original intentions of the parties and the rest of this Agreement remains in full force and effect. Section headings are for descriptive purposes only and are not used to interpret this Agreement. You may not assign this Agreement to any other person or entity without our prior written approval. This Agreement (including any referenced documents and attachments) makes up the entire agreement between you and us and replaces all prior written or spoken agreements, representations, promises or understandings between you and us. The provisions of this Agreement that are contemplated to be enforceable after the termination of this Agreement survive termination of this Agreement. If there is a conflict, the Service Plan (including any Term Service Plan) controls over the Terms.

Manufacturer's Warranty

STANDARD LIMITED WARRANTY

What is Covered and For How Long? SAMSUNG TELECOMMUNICATIONS AMERICA, L.P. ("SAMSUNG") warrants to the original purchaser ("Purchaser") that SAMSUNG's Phones and accessories ("Products") are free from defects in material and workmanship under normal use and service for the period commencing upon the date of purchase and continuing for the following specified period of time after that date:

Phone	1 Year
Batteries	1 Year
Leather Case/Pouch	90 Days
Holster	90 Days
Other Phone Accessories	1 Year

What is Not Covered? This Limited Warranty is conditioned upon proper use of Product by Purchaser. This Limited Warranty does not cover: (a) defects or damage resulting from accident, misuse, abuse, neglect, unusual physical, electrical or electromechanical stress, or modification of any part of Product, including antenna, or cosmetic damage; (b) equipment that has the serial number removed or made illegible; (c) any plastic surfaces or other externally exposed parts that are scratched or damaged due to normal use; (d) malfunctions resulting from the use of Product in conjunction with accessories, products, or ancillary/peripheral equipment not furnished or approved by SAMSUNG; (e) defects or damage from improper testing, operation, maintenance, installation, or adjustment; (f) installation, maintenance, and service of Product, or (g) Product used or purchased outside the United States or Canada. This Limited Warranty covers batteries only if battery capacity falls below 80% of rated capacity or the battery leaks, and this Limited Warranty does not cover any battery if (i) the battery has been charged by a battery charger not specified or approved by SAMSUNG for charging the battery, (ii) any of the seals on the battery are broken or show evidence of tampering, or (iii) the battery has been used in equipment other than the SAMSUNG phone for which it is specified.

What are SAMSUNG's Obligations? During the applicable warranty period, SAMSUNG will repair or replace, at SAMSUNG's sole option, without charge to Purchaser, any defective component part of Product. To obtain service under this Limited Warranty, Purchaser must return Product to an authorized phone service facility in an adequate container for shipping, accompanied by

Purchaser's sales receipt or comparable substitute proof of sale showing the date of purchase, the serial number of Product and the sellers' name and address. To obtain assistance on where to deliver the Product, call Samsung Customer Care at 1-888-987-4357. Upon receipt, SAMSUNG will promptly repair or replace the defective Product. SAMSUNG may, at SAMSUNG's sole option, use rebuilt, reconditioned, or new parts or components when repairing any Product or replace Product with a rebuilt, reconditioned or new Product. Repaired/replaced leather cases, pouches and holsters will be warranted for a period of ninety (90) days. All other repaired/replaced Product will be warranted for a period equal to the remainder of the original Limited Warranty on the original Product or for 90 days, whichever is longer. All replaced parts, components, boards and equipment shall become the property of SAMSUNG. If SAMSUNG determines that any Product is not covered by this Limited Warranty, Purchaser must pay all parts, shipping, and labor charges for the repair or return of such Product.

What Are the Limits On SAMSUNG's Liability? EXCEPT AS SET FORTH IN THE EXPRESS WARRANTY CONTAINED HEREIN, PURCHASER TAKES THE PRODUCT "AS IS," AND SAMSUNG MAKES NO WARRANTY OR REPRESENTATION AND THERE ARE NO CONDITIONS, EXPRESS OR IMPLIED, STATUTORY OR OTHERWISE, OF ANY KIND WHATSOEVER WITH RESPECT TO THE PRODUCT, INCLUDING BUT NOT LIMITED TO:

- THE MERCHANTABILITY OF THE PRODUCT OR ITS FITNESS FOR ANY PARTICULAR PURPOSE OR USE;**
- WARRANTIES OF TITLE OR NON-INFRINGEMENT;**
- DESIGN, CONDITION, QUALITY, OR PERFORMANCE OF THE PRODUCT;**
- THE WORKMANSHIP OF THE PRODUCT OR THE COMPONENTS CONTAINED THEREIN; OR**
- COMPLIANCE OF THE PRODUCT WITH THE REQUIREMENTS OF ANY LAW, RULE, SPECIFICATION OR CONTRACT PERTAINING THERETO.**

NOTHING CONTAINED IN THE INSTRUCTION MANUAL SHALL BE CONSTRUED TO CREATE AN EXPRESS WARRANTY OF ANY KIND WHATSOEVER WITH RESPECT TO THE PRODUCT. ALL IMPLIED WARRANTIES AND CONDITIONS THAT MAY ARISE BY OPERATION OF LAW, INCLUDING IF APPLICABLE THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE HEREBY LIMITED TO THE SAME DURATION OF TIME AS THE EXPRESS WRITTEN WARRANTY STATED HEREIN. SOME STATES/PROVINCES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU. IN ADDITION, SAMSUNG SHALL NOT BE LIABLE FOR ANY DAMAGES OF ANY KIND RESULTING FROM THE PURCHASE, USE, OR MISUSE OF, OR INABILITY TO USE THE PRODUCT OR ARISING DIRECTLY OR

INDIRECTLY FROM THE USE OR LOSS OF USE OF THE PRODUCT OR FROM THE BREACH OF THE EXPRESS WARRANTY, INCLUDING INCIDENTAL, SPECIAL, CONSEQUENTIAL OR SIMILAR DAMAGES, OR LOSS OF ANTICIPATED PROFITS OR BENEFITS, OR FOR DAMAGES ARISING FROM ANY TORT (INCLUDING NEGLIGENCE OR GROSS NEGLIGENCE) OR FAULT COMMITTED BY SAMSUNG, ITS AGENTS OR EMPLOYEES, OR FOR ANY BREACH OF CONTRACT OR FOR ANY CLAIM BROUGHT AGAINST PURCHASER BY ANY OTHER PARTY. SOME STATES/PROVINCES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION OR EXCLUSION MAY NOT APPLY TO YOU.

THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS, WHICH VARY FROM STATE TO STATE/PROVINCE TO PROVINCE. THIS LIMITED WARRANTY SHALL NOT EXTEND TO ANYONE OTHER THAN THE ORIGINAL PURCHASER OF THIS PRODUCT AND STATES PURCHASER'S EXCLUSIVE REMEDY. IF ANY PORTION OF THIS LIMITED WARRANTY IS HELD ILLEGAL OR UNENFORCEABLE BY REASON OF ANY LAW, SUCH PARTIAL ILLEGALITY OR UNENFORCEABILITY SHALL NOT AFFECT THE ENFORCEABILITY FOR THE REMAINDER OF THIS LIMITED WARRANTY WHICH PURCHASER ACKNOWLEDGES IS AND WILL ALWAYS BE CONSTRUED TO BE LIMITED BY ITS TERMS OR AS LIMITED AS THE LAW PERMITS.

THE PARTIES UNDERSTAND THAT THE PURCHASER MAY USE THIRD-PARTY SOFTWARE OR EQUIPMENT IN CONJUNCTION WITH THE PRODUCT. SAMSUNG MAKES NO WARRANTIES OR REPRESENTATIONS AND THERE ARE NO CONDITIONS, EXPRESS OR IMPLIED, STATUTORY OR OTHERWISE, AS TO THE QUALITY, CAPABILITIES, OPERATIONS, PERFORMANCE OR SUITABILITY OF ANY THIRD-PARTY SOFTWARE OR EQUIPMENT, WHETHER SUCH THIRD-PARTY SOFTWARE OR EQUIPMENT IS INCLUDED WITH THE PRODUCT DISTRIBUTED BY SAMSUNG OR OTHERWISE, INCLUDING THE ABILITY TO INTEGRATE ANY SUCH SOFTWARE OR EQUIPMENT WITH THE PRODUCT. THE QUALITY, CAPABILITIES, OPERATIONS, PERFORMANCE AND SUITABILITY OF ANY SUCH THIRD-PARTY SOFTWARE OR EQUIPMENT LIE SOLELY WITH THE PURCHASER AND THE DIRECT VENDOR, OWNER OR SUPPLIER OF SUCH THIRD-PARTY SOFTWARE OR EQUIPMENT, AS THE CASE MAY BE.

This Limited Warranty allocates risk of Product failure between Purchaser and SAMSUNG, and SAMSUNG's Product pricing reflects this allocation of risk and the limitations of liability contained in this Limited Warranty. The agents, employees, distributors, and dealers of SAMSUNG are not authorized to make modifications to this Limited Warranty, or make additional warranties binding on SAMSUNG. Accordingly, additional statements such as dealer advertising or presentation, whether oral or written, do not constitute warranties by SAMSUNG and should not be relied upon.

Samsung Telecommunications America, L.P.
1130 East Arapaho Road
Richardson, Texas 75081
Phone: 1-800-SAMSUNG
Phone: 1-888-987-HELP (4357)

©2002 Samsung Telecommunications America. All rights reserved.
No reproduction in whole or in part allowed without prior written approval.
Specifications and availability subject to change without notice.
[080802]



A

- Accessing the Calculator 126
- Accessing the Security Menu 90
- Accessories 127
- Accessory Options 128
- Adding a Phone Number to an Internal Phone Book Entry 75
- Adding an E-mail Address to an Internal Phone Book Entry 76
- Alarm Clock 95, 98
- Answering Calls 34
- Assigning Downloaded Ringers and Graphics 82

B

- Backlight
 - Changing time length 84
- Battery
 - Capacity 23
 - Charging 25
 - Installation 23
 - Removing 24

C

- Calculator 125
- Calendar
 - Jump To Date 95
 - Task List 95
 - Today 94
- Call - Muting a call 56
- Call Forwarding 59
- Call Guard 30
- Call History
 - Erasing 64
 - Managing 61
 - Options 62
 - Viewing 62
- Call Waiting 58
- Caller ID 58
- Changing Ringer Volume 56
- Changing the Contrast 86
- Changing the Lock Code 91
- Command Keys 21
- Connect Alert 85
- Countdown 95
- Customer Care 14

D

Data

- Receiving 87
- Data/Fax Mode 86
- Dialing Options 37
- Dialing Phone Numbers With Pauses 42
- Directory Assistance 15
- Disconnect Alert 85
- Display Screen 22
- Downloading Ringers and Graphics 81

E

- Editing an Internal Phone Book Entry 75
- Entering Characters
 - Character Input Mode 51

F

- Finding Internal Phone Book Entries 74
- Forwarding Calls 59
- Front View of Phone 20

G

- Games 119
 - Fly Ribbon 121
 - Push Push 120
 - Spider Hunter 121
- Getting Help 14
- Getting Started With Sprint PCS Service 11, 12
- Getting to Know Your Sprint PCS Phone 17
- Greeting
 - Changing 80

I

- Internal Phone Book 73
 - Adding a New Entry 74
 - Entry Options 74
 - Secret Entries 76

L

- Language
 - Changing 80
- Lock Mode
 - Calling in 91
- Locking Your Phone 90

M

- Making Calls 34
- Menu Diagram 47

Menu Navigation 46

Menu Structure 46

Menus

Viewing 47

Message

Types 66

Messages

Knowing when you have them 66

Messaging

Managing 65

Missed Call Notification 35

Muting 35

N

Navigating Menus 46

Navigating Through Menus and Entering Text 45

New Events 96

Numeric Page Options 69

P

Performance and Safety Guidelines 131

Personal Information Management 93

Position Location 123

Services 124

Settings 124

R

Ringer - Silencing 56

Ringer Types 81

Data/Fax 84

Ringer Types for Alarms 84

Ringer Types for Messages 83

Ringer Types for Voice Calls 81

Ringer Volume 80

Roaming

Analog Networks 28

Other Digital Networks 28

Roam Mode 29

S

Security 89

Security - Erasing the Internal Phone Book 92

Security - Resetting Your Phone 92

Security Menu

Accessing 90

Selecting a Ringer Type for an Entry 76

- Sending Numeric Pages 69
- Service Features 57
- Set Time 96
- Setting Up Your Voicemail 13
- Special Numbers 91
- Speed Dialing 43
- Sprint PCS Ringers & More 81
- Sprint PCS Services
 - Billing Information 15
 - Customer Care 14
 - Directory Assistance 15
 - Operator Services 15
- Sprint PCS Voice Command 36
- Symbols and Numbers
 - Entering 53

T

- T9 Text Input 53
- Task List 95
- Termination
 - General 142
 - Non-Term Service Plan 142
 - Term Service Plan 141
- Three-Way
 - Calling 59
- Three-Way Calling 59
- To edit a Today event 97
- To Erase a Programmed Alarm 98
- To erase an event 97
- To Set Time using the menu options 96
- To View, Add, Edit or Erase an event on your Calendar 94
- Troubleshooting 111
- Turning Your Phone On and Off 12

U

- Understanding This User Guide 16
- Unlocking Your Phone 13, 90
- Using the Battery 23

V

- Voice Mode
 - Returning from data or fax mode 87
- Voice Services 99
- Voice-Activated Dialing 100
- Voicemail

- Clearing the Icon 68
- New message alerts 67
- Retrieving 67
- Retrieving messages 67
- Setting Up 13
- Setting up 66
- Volume
 - Adjusting 55
 - Adjusting during a conversation 56
 - Conversation 35
 - Ringer 39, 56, 121, 124, 126, 129

W

- Warranty 153
- Web Alerts
 - Displaying 71
 - New 71
- Web Guard 108
- Web Messages
 - Displaying 69
 - Sending 68
- What are the Schedule Options 94
- Wireless Web
 - Bookmarks 110
 - Browser 106
 - Home Page 107
 - Short Mail 116
 - Updates 118
- Wireless Web Browser
 - Launching 107
- Wireless Web Message
 - Storage 69

Y

- Your Phone Number 43, 77